

DEMOLITION DERBY U.R. 2 PLAYER

Bally

MIDWAY MFG. CO.

10601 W Belmont Avenue
Franklin Park, Illinois 60131
U.S.A.



Phone: (312) 451-9200 Cable Address: MIDCO Telex No.: 72-1596

0A59-00300-0000

WARNING

**THIS GAME MUST BE GROUNDED. FAILURE TO DO SO MAY
RESULT IN DESTRUCTION TO ELECTRONIC COMPONENTS.**

WARNING: This equipment generates uses and can radiate radio frequency energy and if not used in accordance with the instructions manual may cause interference to radio communications. It has been tested and found to comply with the limits for a CLASS A computing device pursuant to SUBPART J of PART 15 of FCC RULES, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

ELECTRICAL BULLETIN: FOR ALL APPARATUS COVERED BY THE CANADIAN STANDARDS ASSOCIATION (CSA) STANDARD C22.2 NO. 1, WHICH EMPLOYS A SUPPLY CORD TERMINATED WITH A POLARIZED 2-PRONG ATTACHMENT PLUG.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

ATTENTION: POUR PREVENIR CHOCS ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

Bally MIDWAY
TM

Invites You To Use

**OUR TOLL FREE NUMBERS FOR
SERVICE INFORMATION CONCERNING THIS GAME, OR ANY
OTHER BALLY MIDWAY GAME YOU NOW HAVE ON LOCATION.**

**CALL US FOR PROMPT, COURTEOUS
ANSWERS TO YOUR PROBLEMS.**

VIDEO

PINBALL

Continental U.S. 1-800-323-7182

Bally MIDWAY
TM

10601 West Belmont Avenue Franklin Park Illinois 60131

phone (312) 451-9200

© COPYRIGHT MCMLXXXV BY BALLY MIDWAY MFG. CO.

ALL RIGHTS RESERVED

NO PART OF THIS PUBLICATION MAY BE REPRODUCED BY ANY MECHANICAL, PHOTOGRAPHIC, OR ELECTRONIC PROCESS, OR IN THE FORM OF A PHONOGRAPHIC RECORDING, NOR MAY IT BE TRANSMITTED, OR OTHERWISE COPIED FOR PUBLIC OR PRIVATE USE, WITHOUT PERMISSION FROM THE PUBLISHER. THIS MANUAL IS FOR SERVICE USE ONLY, AND NOT FOR GENERAL DISTRIBUTION. FOR PERMISSION REQUESTS, WRITE: BALLY MIDWAY MFG. CO., 10601 W. BELMONT AVE., FRANKLIN PARK, IL 60131

**DEMOLITION DERBY U.R. - 2 PLAYER
SYSTEM INFORMATION
TABLE OF CONTENTS**

DESCRIPTION	PAGE
INSTALLATION.....	1
TO SERVICE THE CONTROL PANEL.....	1
REMOVAL OF THE MAIN-DISPLAY-GLASS AND/OR THE T.V. BEZEL.....	2
VOLUME CONTROL POT/OPTION SWITCH LOCATIONS.....	2
SELF-TEST MODE.....	2
OPTION SWITCH SETTINGS.....	4
P.C. BOARD REFERENCE DRAWING.....	5

**DEMOLITION DERBY U.R. - 2 PLAYER
SCHEMATICS AND WIRING DIAGRAM
TABLE OF CONTENTS**

DESCRIPTION	PAGE
WELLS GARDNER MONITOR SCHEMATIC - 19".....	1
WELLS GARDNER MONITOR PARTS LIST.....	2
ELECTROHOME MONITOR SCHEMATIC - 19".....	3
ELECTROHOME MONITOR PARTS LIST.....	4
WIRING DIAGRAM - UPRIGHT.....	5
5 MHZ CPU P.C.B. - COMPONENT LAYOUT.....	6
5 MHZ CPU P.C.B. - SCHEMATIC.....	7
SUPER VIDEO P.C.B. - COMPONENT LAYOUT.....	8
SUPER VIDEO P.C.B. - SCHEMATIC.....	9
SUPER SOUND I/O P.C.B. - COMPONENT LAYOUT.....	10
SUPER SOUND I/O P.C.B. - SCHEMATIC.....	11
TURBO CHEAP SQUEAK P.C.B. - COMPONENT LAYOUT.....	12-14
TURBO CHEAP SQUEAK P.C.B. - SCHEMATIC.....	15
DUAL POWER AMP P.C.B. - COMPONENT LAYOUT.....	16
DUAL POWER AMP P.C.B. - SCHEMATIC.....	17
OPTICAL ENCODER P.C.B. - COMPONENT LAYOUT.....	18
OPTICAL ENCODER P.C.B. - SCHEMATIC.....	19
SWITCHING POWER SUPPLY P.C.B. - 125VA - SCHEMATIC.....	20
UNI-POWER SUPPLY CHASSIS ASSY. - 125VA - SCHEMATIC.....	21
EPROM LIST.....	INSIDE BACK COVER

DEMOLITION DERBY U.R. - 2 PLAYER
ILLUSTRATED PARTS BREAKDOWN
TABLE OF CONTENTS

DESCRIPTION	PAGE
COVER SHEET	1
FRONT	2
FRONT - PARTS LIST	3 & 4
REAR ACCESS	5
REAR ACCESS - PARTS LIST	6 & 7
STEERING CONTROL ASSEMBLY	8
STEERING CONTROL ASSEMBLY - PARTS LIST	9
SPEED SHIFT CONTROL ASSEMBLY	10
SPEED SHIFT CONTROL ASSEMBLY - PARTS LIST	11
POWER CHASSIS: 130VA (SWITCHING)	12
POWER CHASSIS: 130VA (SWITCHING) - PARTS LIST	13
FRONT DOOR ASSEMBLY - U.S.A. 25¢	14
FRONT DOOR ASSEMBLY - U.S.A. 25¢ - PARTS LIST	15 - 17

GENERAL INSTRUCTIONS
FOR
DEMOLITION DERBY - 2 PLAYER

INSTALLATION

1. Remove keys from the taped coin return slot and unlock to open the coin box door.
2. Remove four (4) "CABINET LEVELING LEGS" from inside the coin box.
3. Tip the cabinet to the side and remove the shipping cleats from its bottom.
 - Locate the threaded holes - one in each corner - and install the "CABINET LEVELING LEGS" in them.
 - Level the cabinet.
 - When finished, the cabinet should be stable in the upright position.
4. • Unlock and remove the rear access door to gain access to the 3-pronged line cord. Reinstall the rear access door.
5. Connect the 3-pronged line cord to a 3-slot A.C. wall outlet **to insure proper grounding.**
6. The power ON/OFF switch is located:

UPRIGHT MODEL: On top to the left rear of the cabinet.

TO SERVICE THE CONTROL PANEL

1. UPRIGHT MODEL:
 - The control panel is held in place by three (3) spring clamps which provide constant pressure on the strikes.
 - **AFTER turning power to the game off**, they can be reached through the coin door.
 - To release the clamps, lift up and toward the center of the control panel.
 - Once they are released, unhook them from their strikes. The third clamp is located near the center of the control panel.
 - Swing out the control panel on it's hinge.
 - To remove the control panel:
 - With the control panel in it's open position, disconnect it from it's cabling and then disconnect it from it's retaining chain.
 - Remove the screws which secure the continuous hinge to the cabinet.
 - The control panel is now loose and may be serviced.
 - To reinstall the control panel, reverse this procedure.

REMOVAL OF THE MAIN-DISPLAY-GLASS AND/OR THE T.V. BEZEL

1. UPRIGHT MODEL:

NOTE: In order to do this, the control panel **MUST** be removed first. See the "UPRIGHT MODEL" procedure.

- Turn the power to the game off and remove the control panel. This frees the main-display-glass so it can be removed.
- By putting your finger in the hole in the middle of the main-display-glass support, you can lift it up and out.
- Remove the bezel securing screws and the bezel may be removed.
- To reinstall the T.V. bezel and the main-display-glass, reverse this procedure.

VOLUME CONTROL POT / OPTION SWITCH LOCATIONS

The volume control pot is located, along with the credit switch and the self-test switch, just inside the cabinet on the right side of the coin door frame. The option switch is located as shown in the attached P.C. Board reference drawing. For adjustment, it can be reached through the games rear access door.

To make the sounds louder, turn the volume pot clockwise as you face it.

To make the sounds **less** loud, turn the volume pot counterclockwise as you face it.

SELF-TEST MODE

The Self-Test mode is a special mode for checking the game switches and computer functions. It is the most complete way of checking for proper game operation and is quite easy to use.

The Self-Test mode may be entered at any time and from any mode of operation. Simply locate the black slide switch inside the Coin Box compartment and slide it to the Self-Test position. With this switch in the Self-Test position, activate the slam switch located on the Coin Door. The game will enter the Self-Test mode immediately and display the following test menu....

1. SELF DIAGNOSTICS
2. SOUNDS
3. PLAYER INPUT
4. MACHINE SET-UP
5. CHANNEL TEST
6. GRID DISPLAY

MOVE CURSOR DOWN BY MOVING "STICKSHIFT" TO REVERSE POSITION
MOVE CURSOR UP BY MOVING "STICKSHIFT" TO FORWARD POSITION
HIT START BUTTON FOR TEST

1. SELF DIAGNOSTICS: This test is designed to effectively locate and identify any malfunction of the on-board computer. When selected, the game enters this mode immediately and begins scanning the memory stored in rom and ram. If a defective component is found during the scan, that component and it's location will be displayed on screen. It will take about 15 seconds to perform the entire test.
2. SOUNDS: When selected, this test will display a menu of sounds. The first two selections on the menu are ALL and EXIT. If you move the cursor to select ALL the game will automatically perform a test of all the sounds on the menu. If you move the cursor to select EXIT, the game will exit the sound test and return to the main menu page. While in the sound test, any selection on the sound menu may be tested individually by positioning the cursor next to that sound and pressing the SELECT button.
3. PLAYER INPUT: This test is designed to confirm the operation of all player inputs and devices in the game. For example, when you wish to test the coin switches on the coin door, you would enter this test and activate the coin switches. If the switches are operating properly, the screen will display the words COIN CHUTE 1 or COIN CHUTE 2 depending on which coin switch has been activated. All inputs, pin controls, service switches, etc. may be tested in the same manner. To exit this test, activate the coin door slam switch.
4. MACHINE SET-UP: This test allows you to view your option settings with ease. When selected, a full menu of options will be displayed. The coins per credit, difficulty level, etc. are adjusted thru option switch settings and are viewed on this screen.
5. CHANNEL TEST: This test is self-functional and therefore when entered will perform the test automatically. It's purpose is to test all channels heard through the speaker. If any of the tones are not heard during this test, you may be experiencing a sound problem. To exit this test, activate the coin door slam switch.
6. GRID DISPLAY: This test was designed to display a crosshatch pattern used in adjusting the color monitor. This pattern may be used to adjust convergence, color balance, vertical linearity, and vertical/horizontal size. To exit this test, activate the coin door slam switch.

IMPORTANT NOTE: There is NO battery back up provided for this game. All logic & memory functions will be retained thru dip switch settings.

DEMOLITION DERBY

OPTION SWITCH SETTINGS

//////////////////SWITCH NO. 1 - AT B 3 - LOCATED ON SOUND I/O P.C. BOARD//////////////////



DURING GAME PLAY:	<u>SW#1</u> <u>SW#2</u> <u>SW#3</u> <u>SW#4</u> <u>SW#5</u> <u>SW#6</u> <u>SW#7</u> <u>SW#8</u> <u>SW#9</u> <u>SW#10</u>
	NOT USED
2 PLAYER UPRIGHT 4 PLAYER NOVELTY	***OFF ***ON
** STANDARD DIFFICULTY LEVEL HARDER DIFFICULTY LEVEL	OFF ON
** NO FREE PLAY FREE PLAY	OFF ON
** TROPHY GIRL FULL DISPLAY TROPHY GIRL LIMITED DISPLAY	OFF ON
** 1 COIN / 1 CREDIT 2 COINS/ 1 CREDIT 1 COIN / 2 CREDITS	OFF OFF ON OFF OFF ON
** NORMAL OPERATION FREEZE VIDEO	OFF ON

//////////////////SWITCH NO. 3 - AT D 14 - LOCATED ON SOUND I/O P.C. BOARD//////////////////

	<u>SW#1</u> <u>*SW#2</u> <u>*SW#3</u> <u>*SW#4</u>
** NORMAL OPERATION SOUND I/O DIAGNOSTIC MODE	OFF ON
** NORMAL OPERATION RAM/ROM TEST INDICATES TEST RESULTS VIA YELLOW L E D ON SOUND I/O BOARD: <u>FAST FLASH = BAD ROM</u> <u>SLOW FLASH = BAD RAM</u>	OFF ON
** NORMAL OPERATION OSCILLATOR TEST	OFF ON
** NORMAL OPERATION FILTER TEST	OFF ON
* NO EFFECT IF SW#1 OF SWITCH NO. 3 IS IN THE "OFF" POSITION. ** FACTORY RECOMMENDED SETTINGS.	
*** IF SW #1 OF SWITCH NO. 1 HAS NO EFFECT ON GAME IN "ON" POSITION OR "OFF" POSITION, THIS SOUND I/O P.C. BOARD SHOULD BE USED ONLY IN 4 PLAYER NOVELTY VERSION.	PART NO. M051-00C48-B007

THE REMAINDER OF YOUR NEW GAME'S MOST COMMON OPTION SETTINGS
ARE CONDUCTED DURING YOUR GAME'S SELF-TEST MODE

P. C. B O A R D R E F E R E N C E D R A W I N G

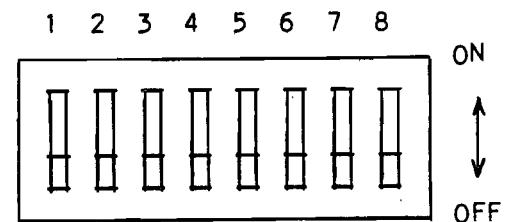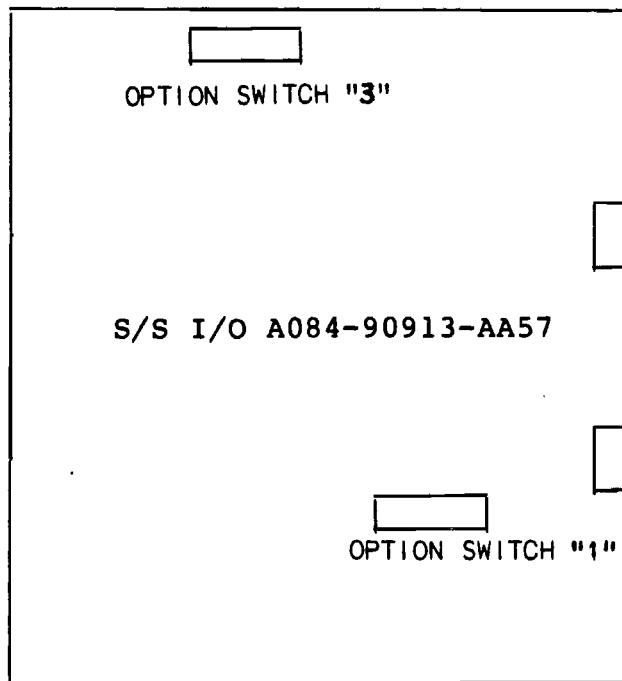

19" COLOR MONITOR SCHEMATIC DIAGRAM

MODELS 19K4901, 19K4906, 19K4951, 19K4956

Power Supply Voltage and Symbols

Symbol	Voltage	Operating Circuit
(●)	15V	Vert. Osc. Sync Blanking CRT Cut-Off
(○)	130V	Horiz. Osc. Horiz. Drive Horiz. Output Vert. Output
(○)	175V	Video Output



**SERVICE TECHNICIAN WARNING
X-RAY RADIATION PRECAUTION:**
THIS PRODUCT CONTAINS CRITICAL
ELECTRICAL AND MECHANICAL PARTS
ESSENTIAL FOR X-RAY RADIATION
PROTECTION.
FOR REPLACEMENT PURPOSES, USE
ONLY TYPE PARTS SHOWN IN THE
PARTS LIST.

**CAUTION: FOR CONTINUED SAFETY,
REPLACE SAFETY CRITICAL COM-
PONENTS ONLY WITH MANUFAC-
TURER'S RECOMMENDED PARTS.**
**AVERTISSEMENT: POUR MAINTENIR
LE DEGRE DE SECURITE DE L'APPAREIL
NE REMPLACER LES COMPOSANTS
DONT LE FONCTIONNEMENT EST
CRITIQUE POUR LA SECURITE QUE PAR
DES PIECES RECOMMANDÉES PAR LE
FABRICANT.**


OSCILLOSCOPE WAVEFORM PATTERN

The waveforms shown are as observed on the wide band oscilloscope with the monitor turned to a reasonably strong signal and a normal picture. The voltages shown on each waveform are the approximate peak amplitudes.

If the waveforms are observed on the oscilloscope with a poor high frequency response, the corner of the pulses will tend to be more rounded than those shown and the amplitude of any high frequency pulse will tend to be less.

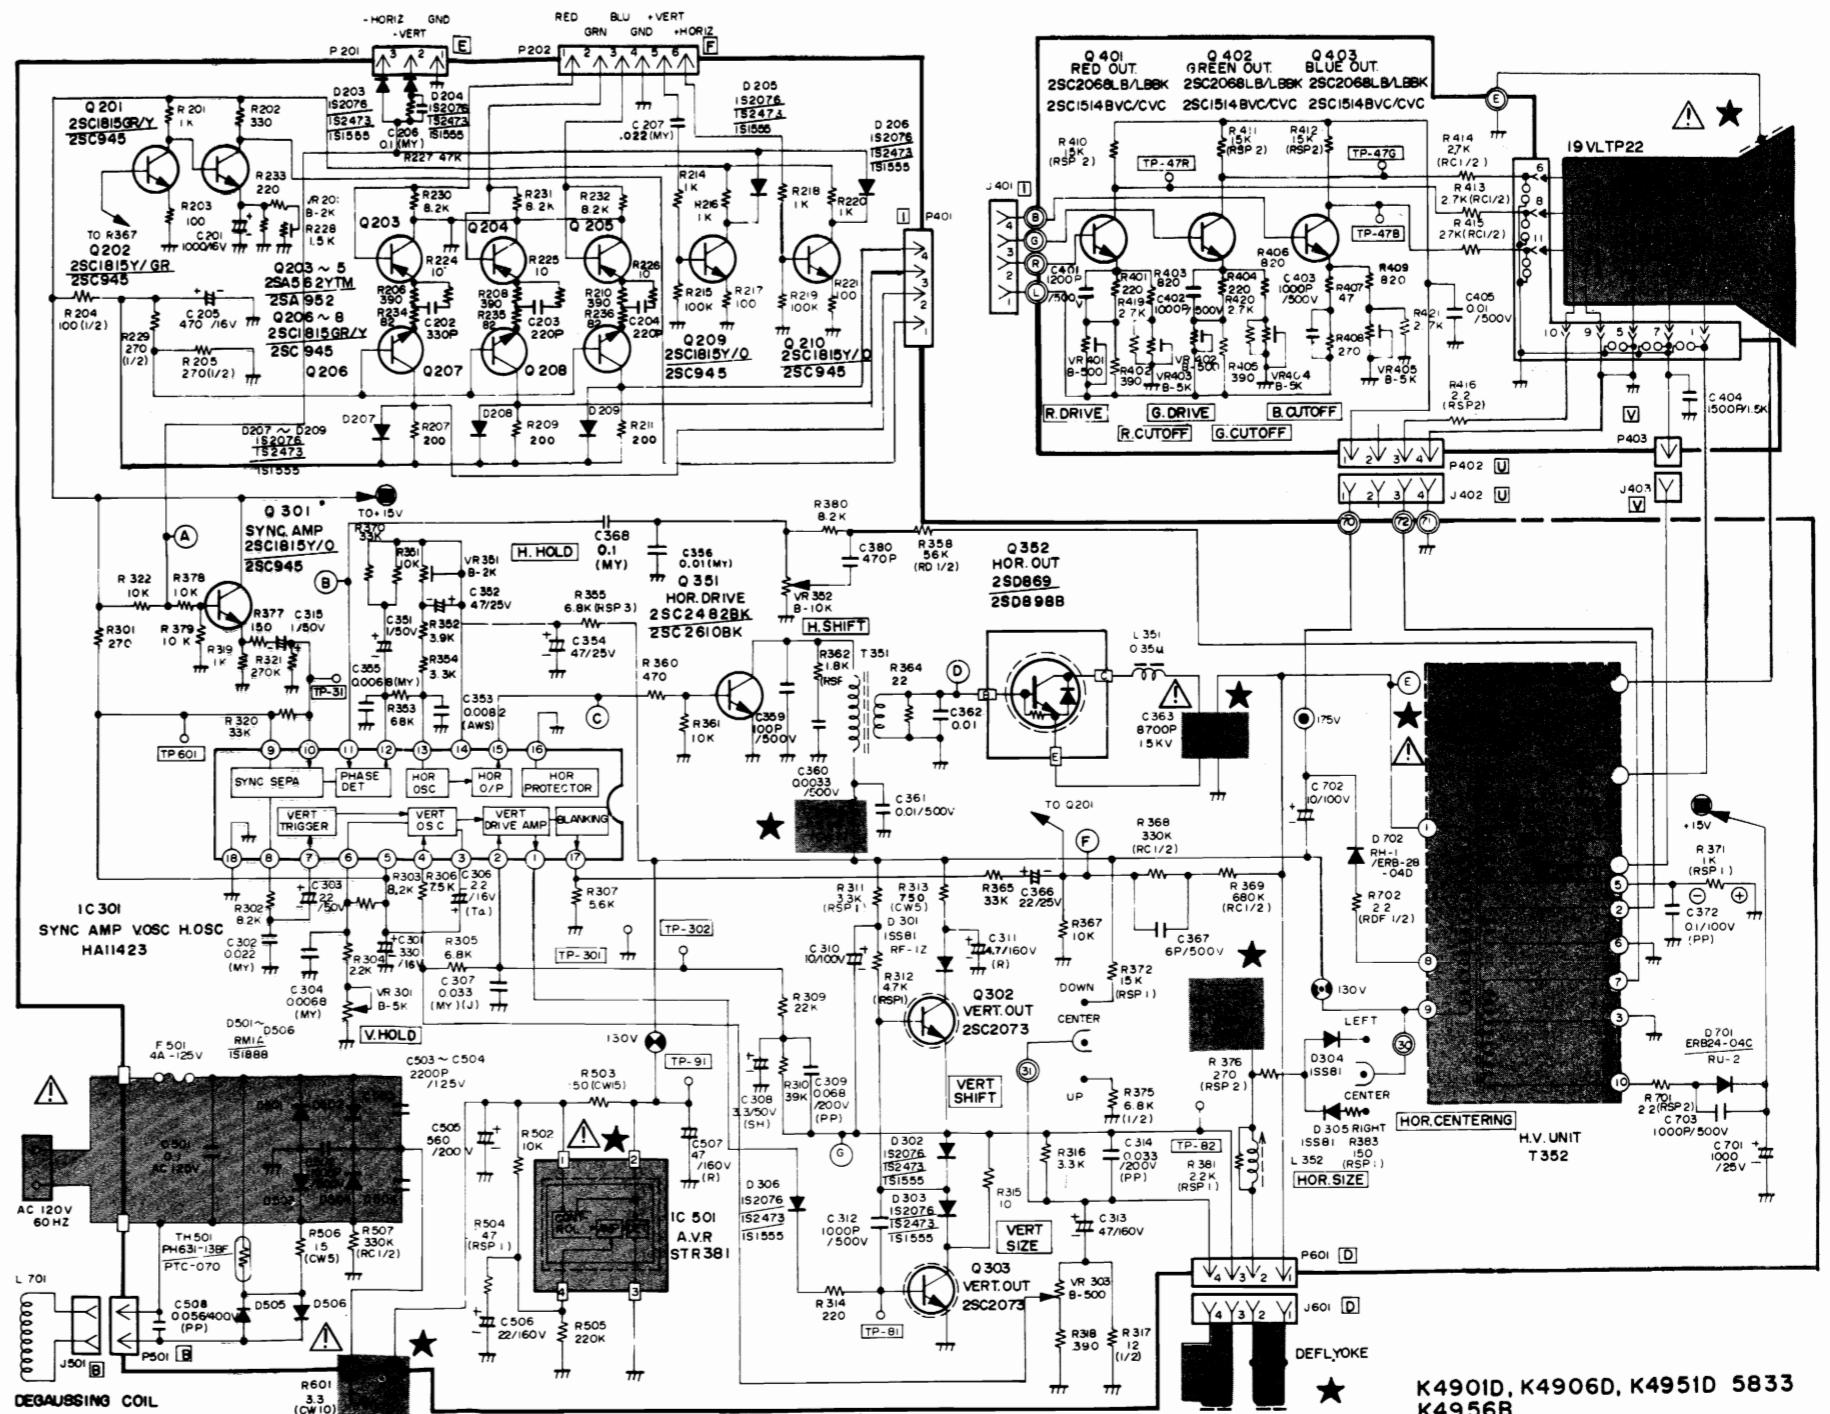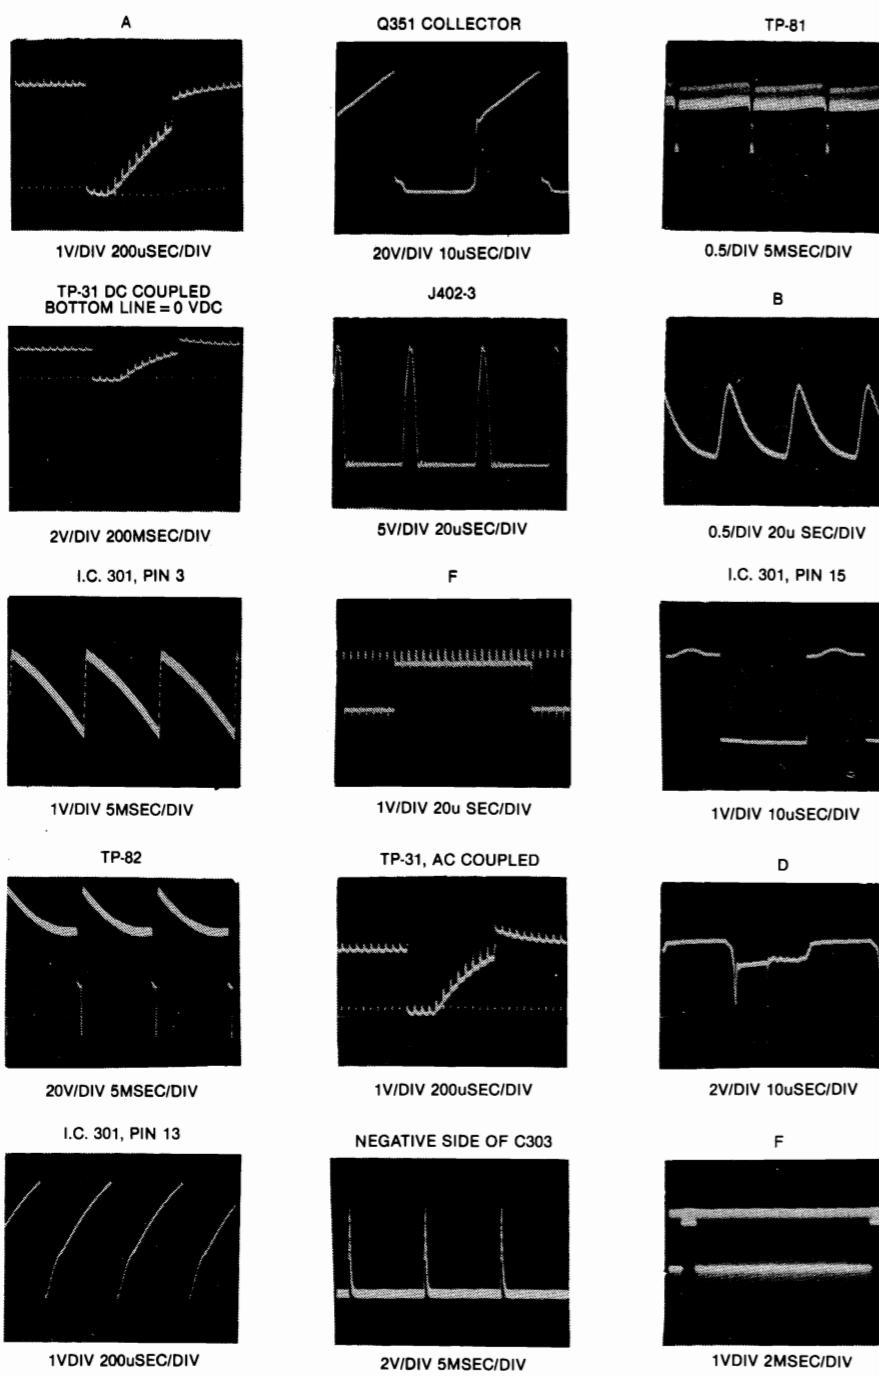

K4901D, K4906D, K4951D 5833
K4956B

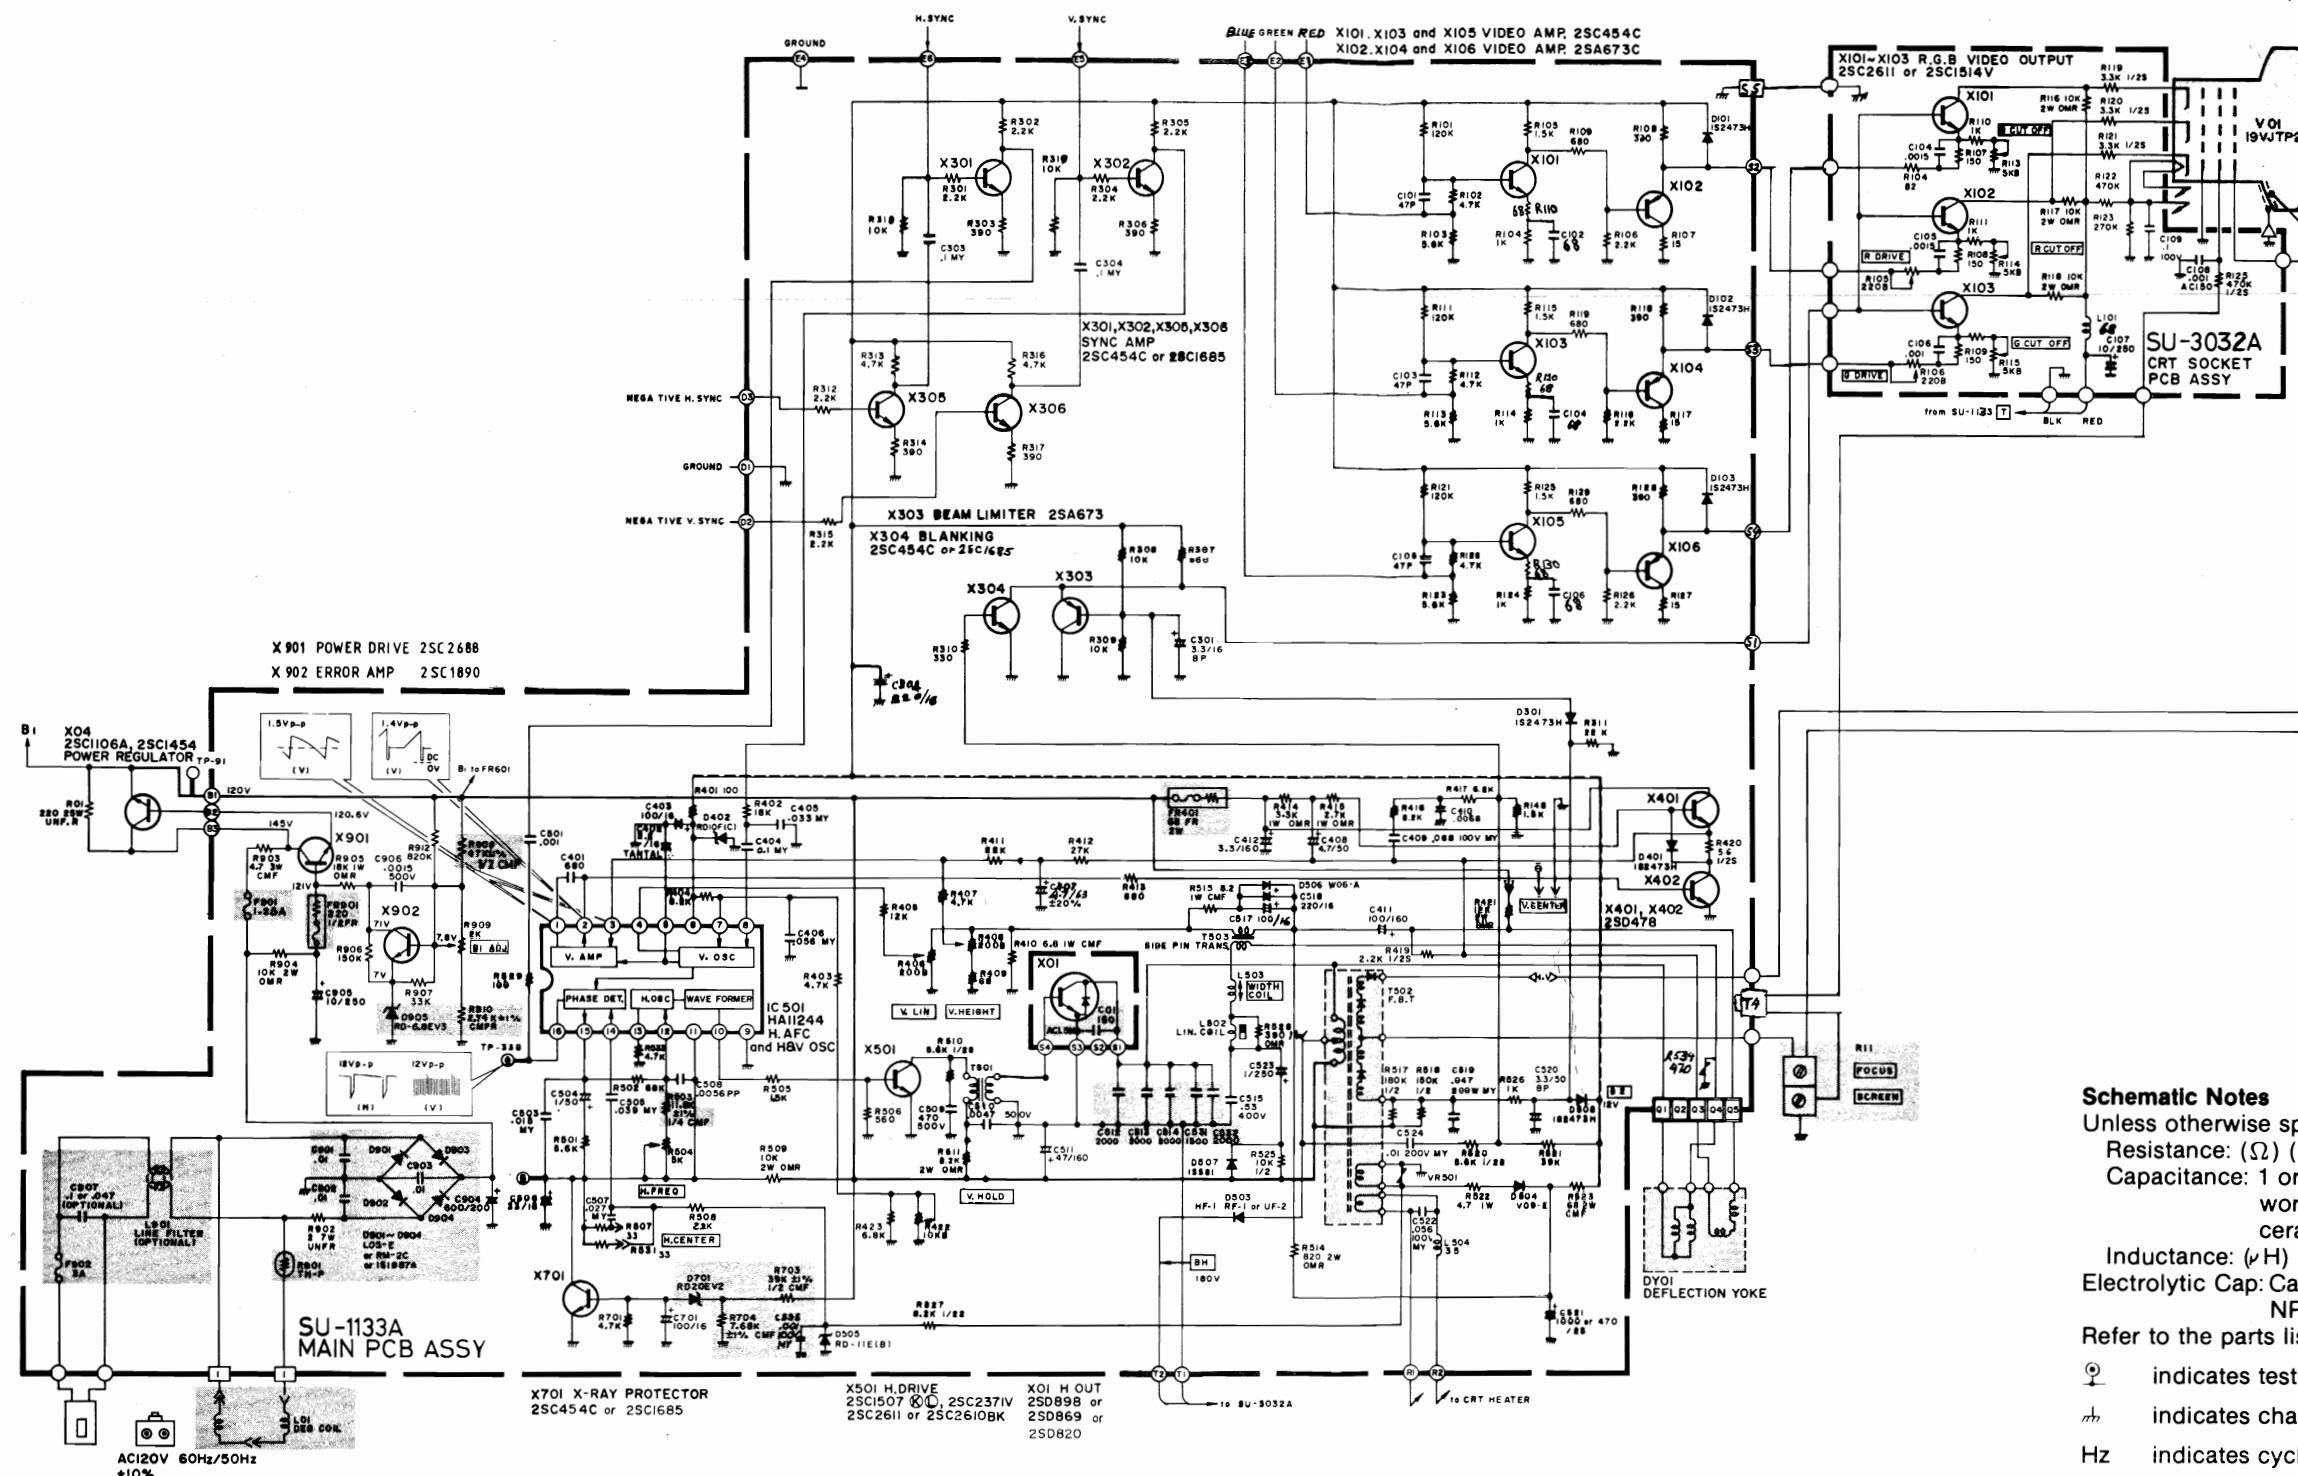

Schematic Notes

Unless otherwise specified

Resistance: (Ω) ($K \rightarrow K\Omega$, $M \rightarrow M\Omega$), 1/4 (W) carbon resistor

Capacitance: 1 or higher \rightarrow (pF), less than 1 \rightarrow (μ F)
working voltage \rightarrow 50 (V)
ceramic capacitor

Inductance: (μ H)

Electrolytic Cap: Capacitance Value (μ F)/working voltage (V),
NP \rightarrow non-polar (or bipolar) electrolytic cap.
Refer to the parts list for additional component information.

\ominus indicates test point connection

\ominus indicates chassis ground unless otherwise specified

Hz indicates cycles per second




For safety purposes (and continuing reliability)

\triangle replace all components marked with safety symbol with identical type.
NOTE: FR \rightarrow fusible resistor (—)


Parts identification on circuit boards:
e.g. SU1126A (R107 = R1107)
SU3030A (R113 = R3113)

00-4147-04
G07-CB0


**WIRING DIAGRAM WAS NOT AVAILABLE AT
TIME OF PUBLICATION OF THIS MANUAL.
IT WILL SOON BE AVAILABLE THRU A SERVICE BULLETIN.**

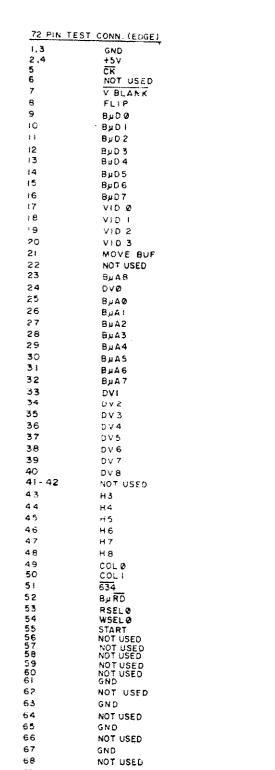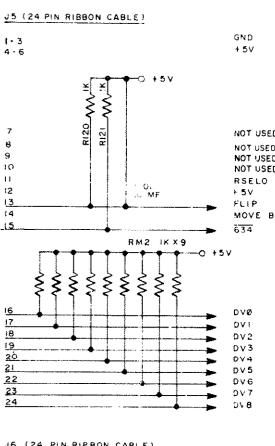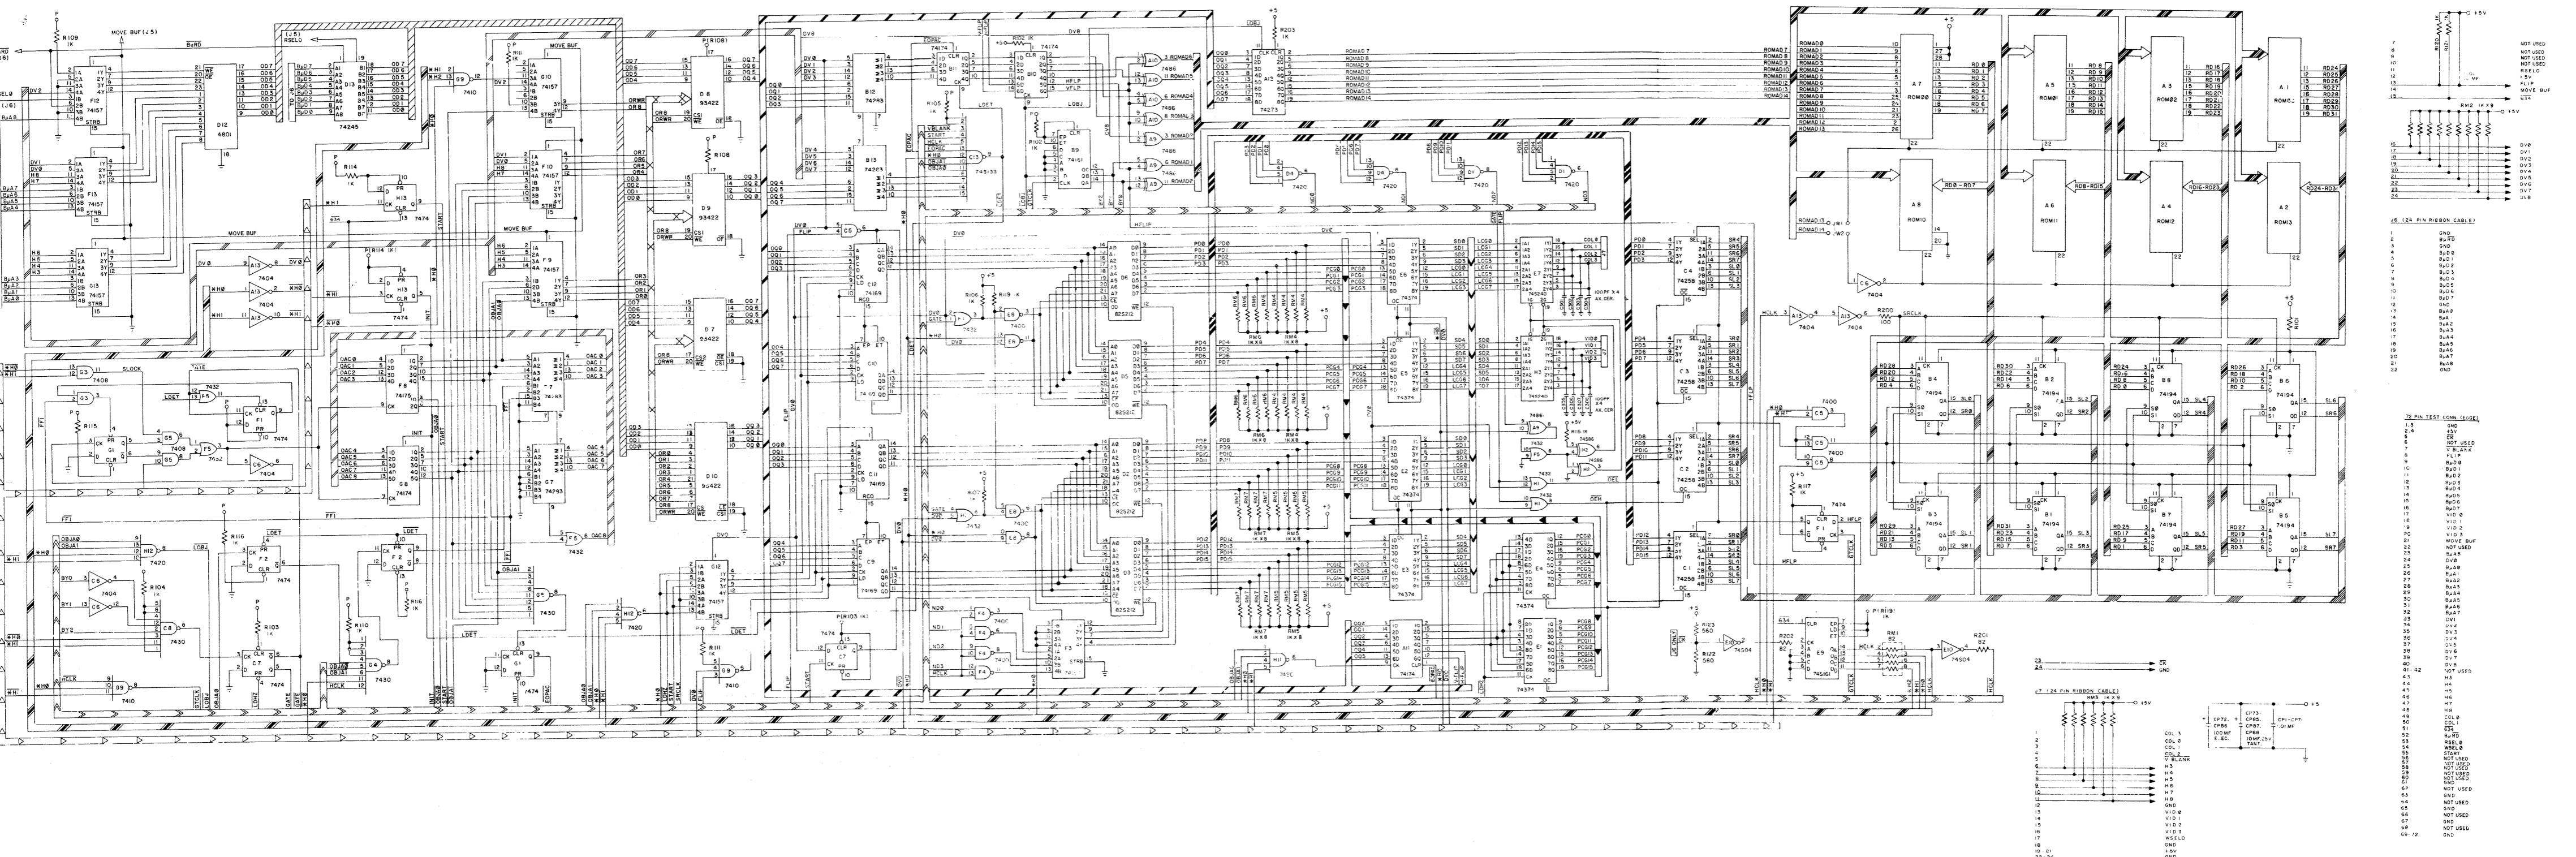

PROJECT END: R. PLOUSSARD
DATE: 10/11/84
REF ID: 110-111
SCHEMATIC D/W: SUPER VIDEO GEN. MCP III
A080-91464-M00
MOSI - 00304 - M006

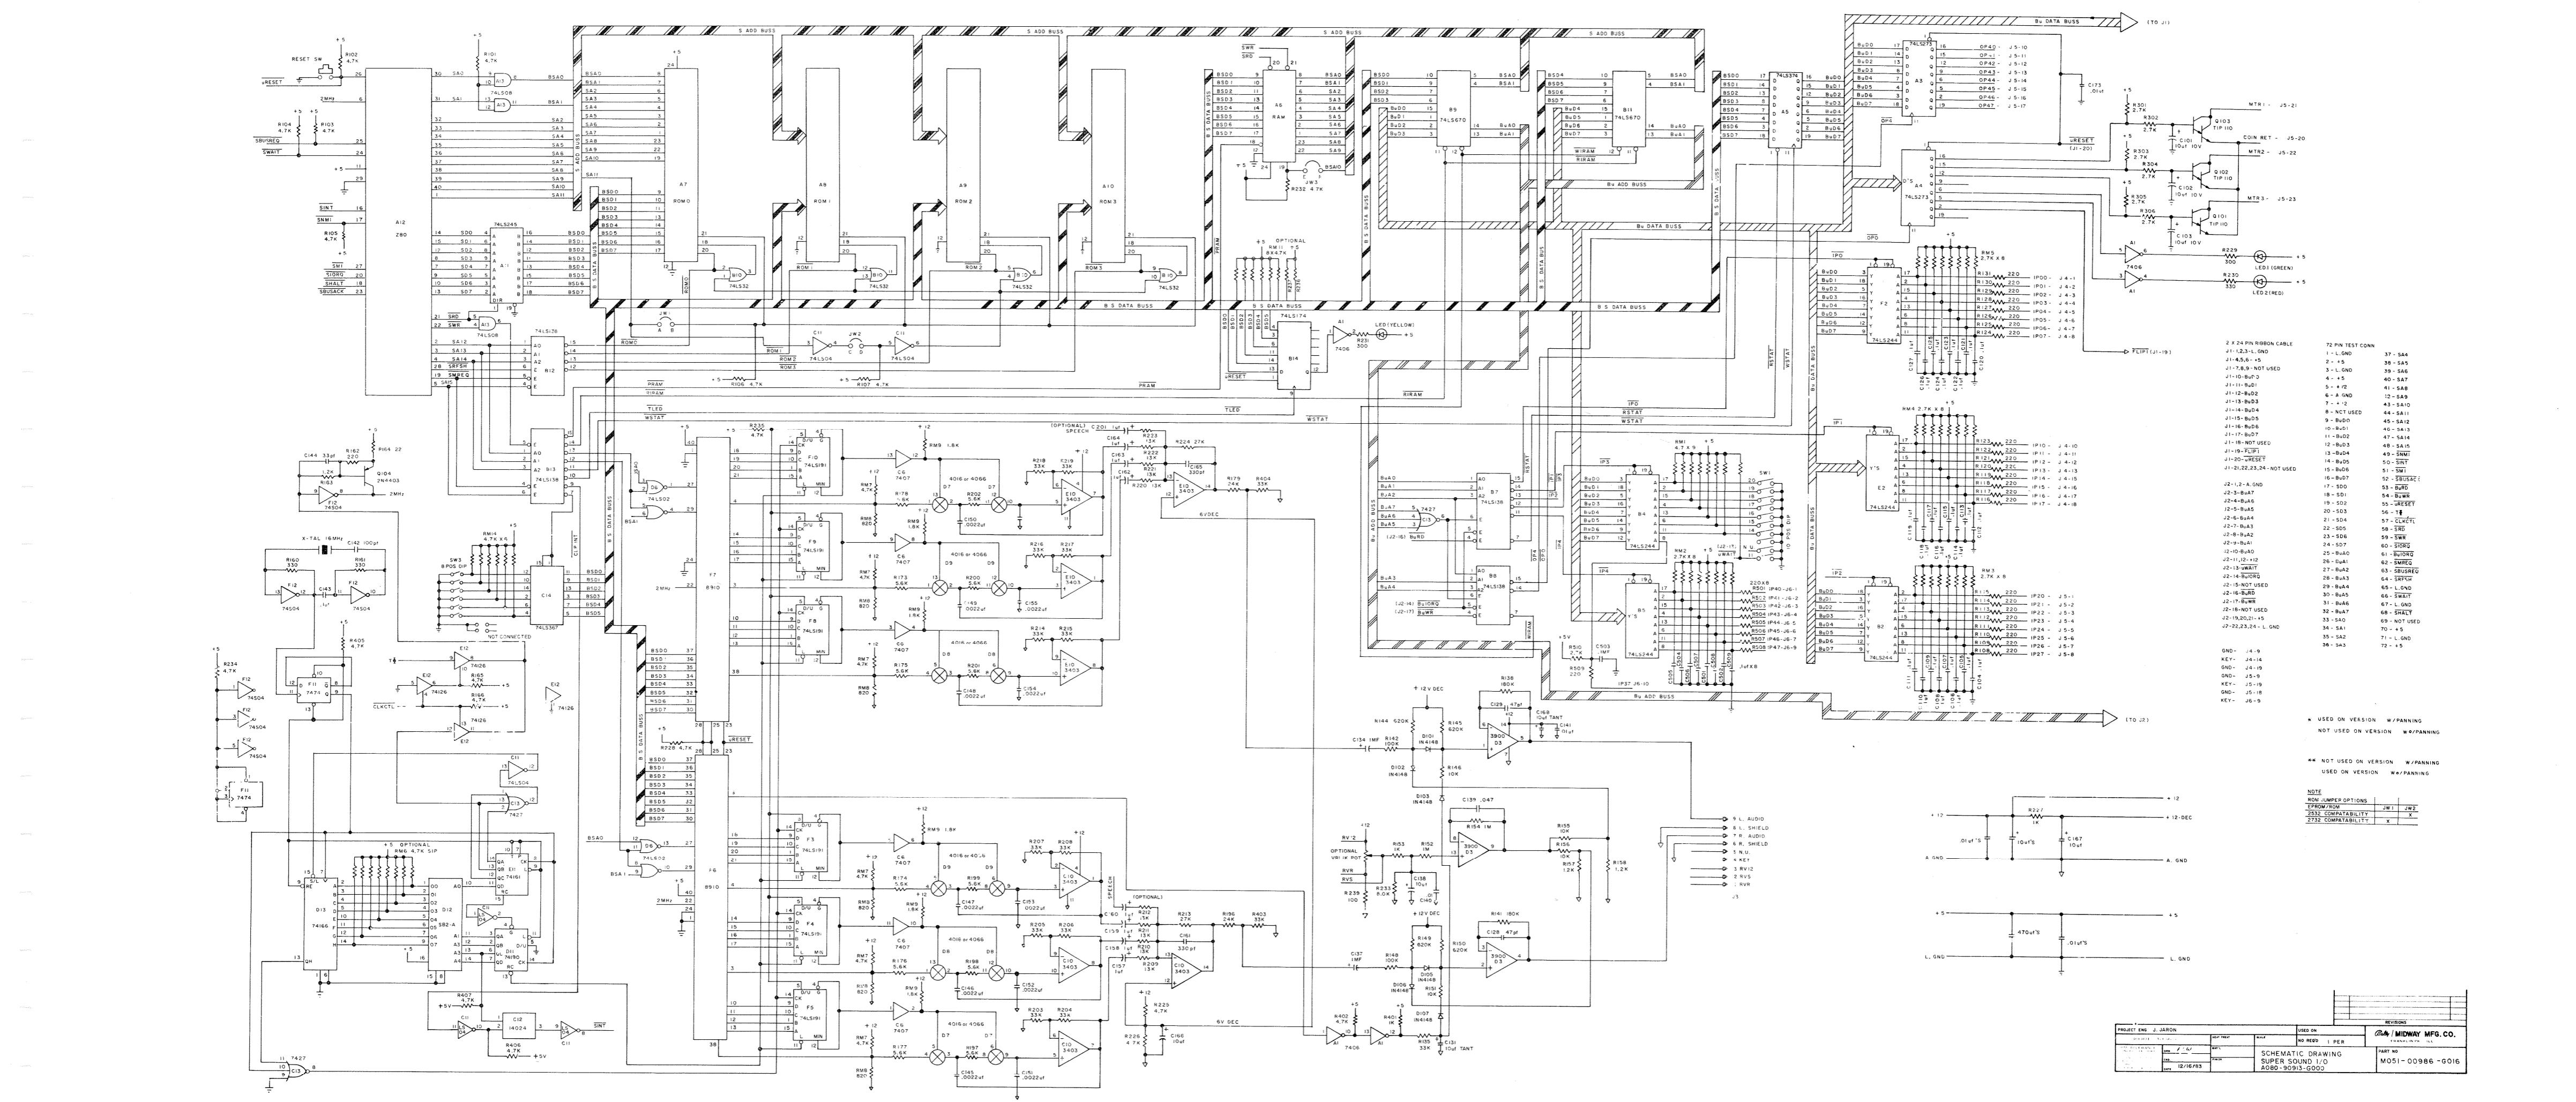

M051-00114-A126
TURBO CHEAP SQUEAK
A084-91779-A000

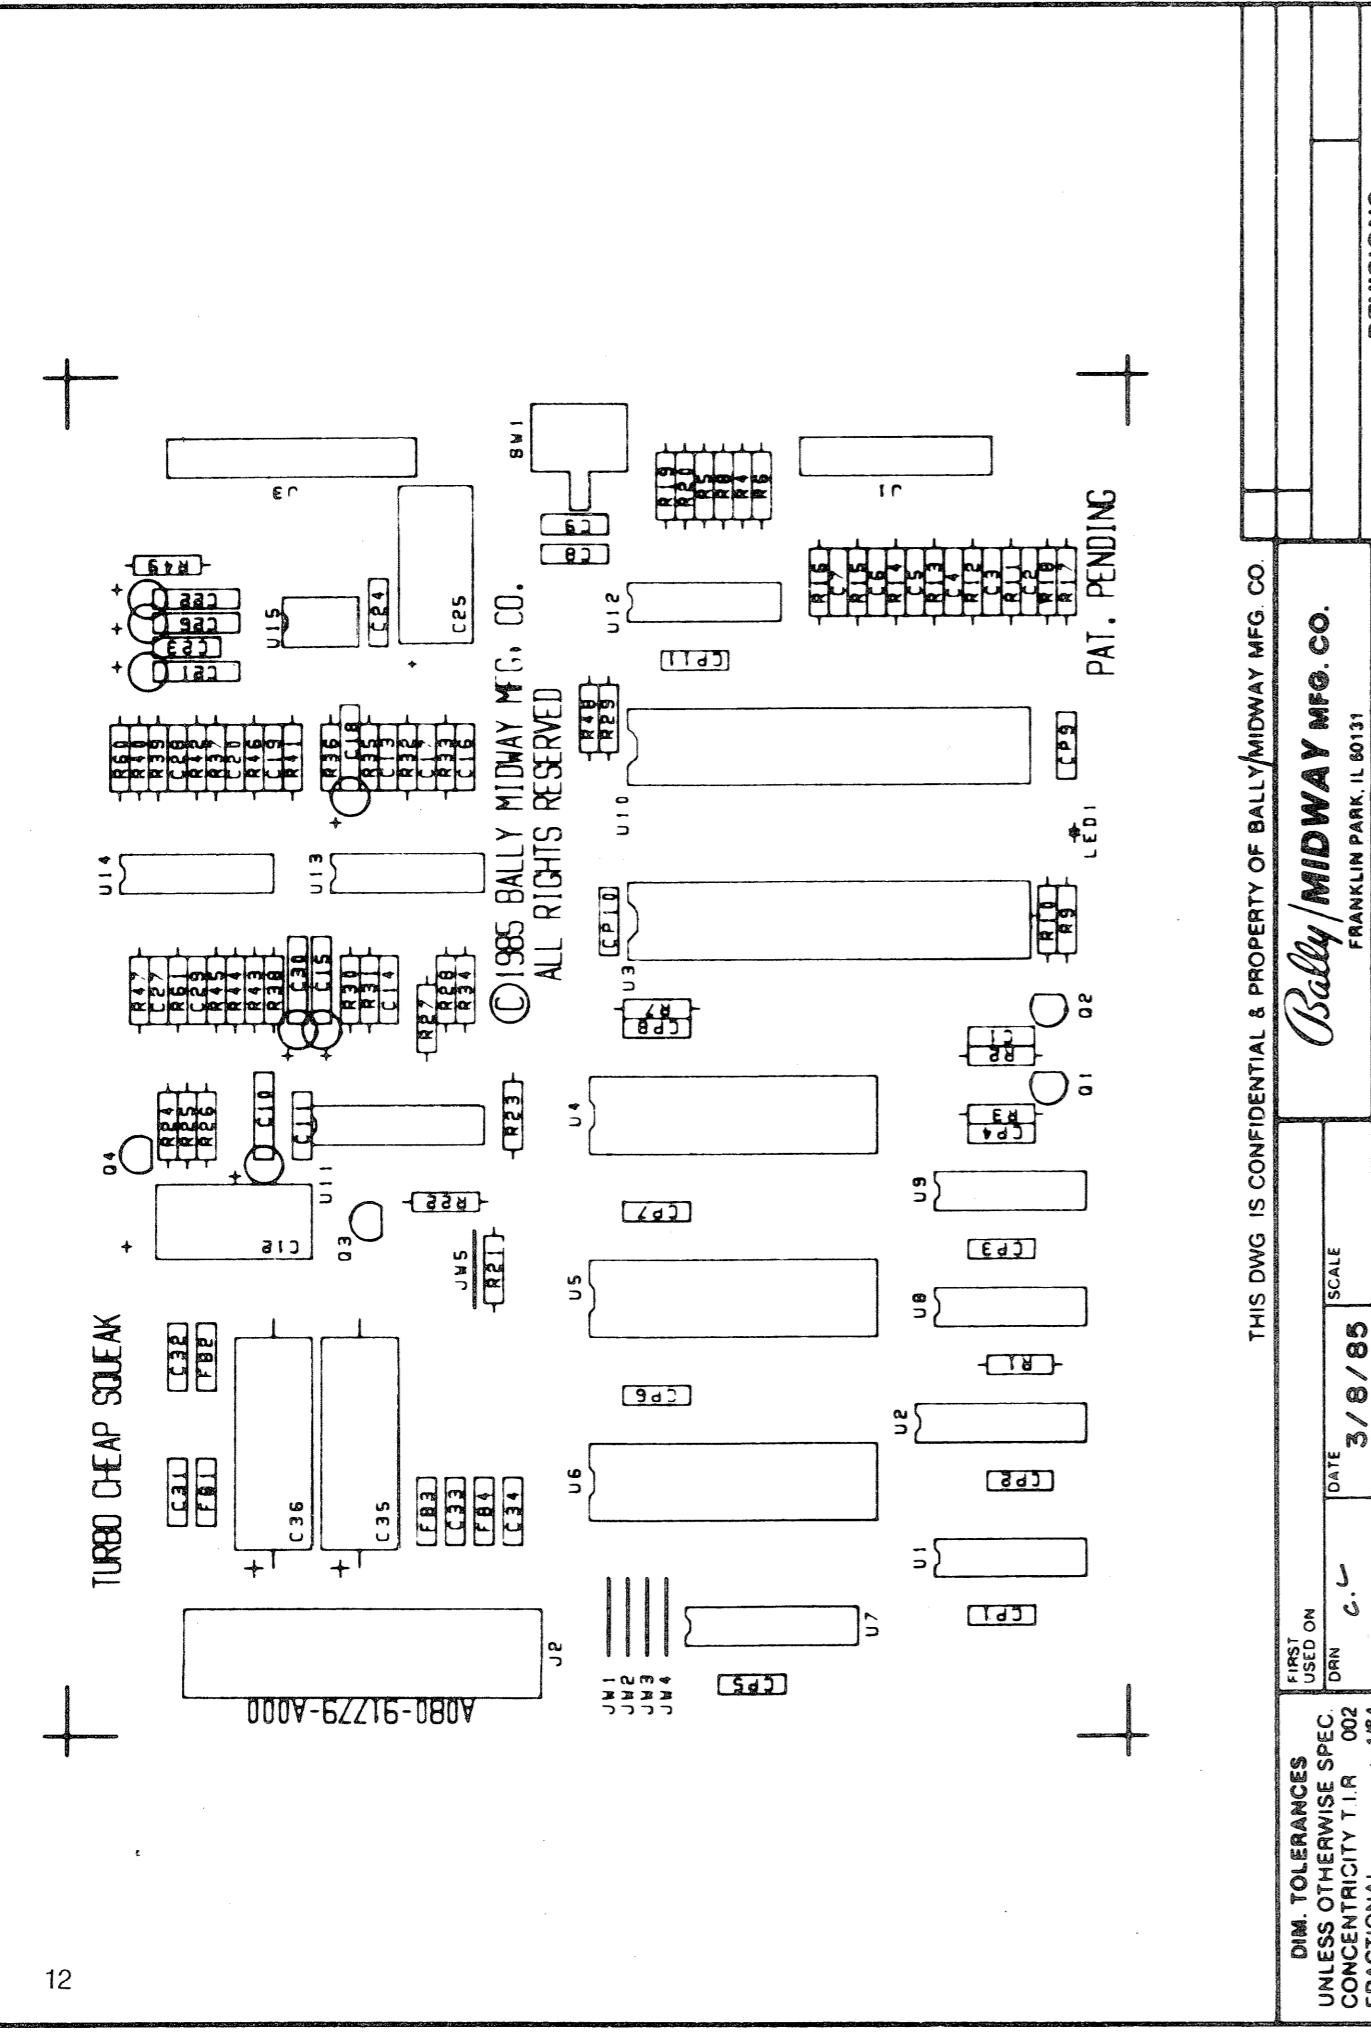

DESIGNATION LIST

DESIGNATION	DESCRIPTION	DESIGNATION	DESCRIPTION
CP1-CP11	.01MF AX. CR.	R32	33K OHM 1/4W 5%
C1	18PF AX. CR.	R33	18K OHM 1/4W 5%
C2-C3	820PF AX. CR.	R34	110K OHM 1/4W 5%
C4-C9	100PF AX. CR.	R35	33K OHM 1/4W 5%
C10	10MF RD TANT	R36	150K OHM 1/4W 5%
C11	.01MF AX. CR.	R37	82K OHM 1/4W 5%
C12	47MF AX. ELECT.	R38	510K OHM 1/4W 5%
C13	.01MF AX. CR.	R39	150K OHM 1/4W 5%
C14	270PF AX. CR.	R40	24K OHM 1/4W 5%
C15	1MF RD TANT	R41	3.3K OHM 1/4W 5%
C16	.0056MF AX. CR.	R42	24K OHM 1/4W 5%
C17	270PF AX. CR.	R43	330K OHM 1/4W 5%
C18	1MF RD TANT	R44	160K OHM 1/4W 5%
C19	470PF AX. CR.	R45	100 OHM 1/4W 5%
C20	150PF AX. CR.	R46	560K OHM 1/4W 5%
C21-C22	1MF RD TANT	R47	24K OHM 1/4W 5%
C23	680PF AX. CR.	R48	4.7K OHM 1/4W 5%
C24	.01MF AX. CR.	R49	2.7K OHM 1/4W 5%
C25	47MF AX. ELECT.	R60	1K OHM 1/4W 5%
C26	1MF RD TANT	R61	1K OHM 1/4W 5%
C27	68PF AX. CR.	01	MPS3646
C28-C29	.01MF AX. CR.	02-04	2N5305
C30	10MF RD TANT		
C31-C34	390PF AX. CR.		
C35-C36	470MF AX. ELECT.		
R1	4.7K OHM 1/4W 5%	U1	C1K OSC
R2	3.3K OHM 1/4W 5%	U2	74LS76
R3	150 OHM 1/4W 5%	U3	68B09E
R4-R8	4.7K OHM 1/4W 5%	U4	EPROM/ROM
R9	100 OHM 1/4W 5%	U5	EPROM/ROM
R10	47K OHM 1/4W 5%	U6	2K X 8 RAM
R11-R12	100 OHM 1/4W 5%	U7	74LS139
R13-R16	10K OHM 1/4W 5%	U8	74LS02
R17	100K OHM 1/4W 5%	U9	74LS00
R18	10K OHM 1/4W 5%	U10	68B21
R19	100K OHM 1/4W 5%	U11	AD7533
R20	10K OHM 1/4W 5%	U12	40106
R21	4.7K OHM 1/4W 5%	U13	LM359
R22	47K OHM 1/4W 5%	U14	LM359
R23	360 OHM 1/4W 5%	U15	3340
R24	2.7K OHM 1/4W 5%	ICS U3	40 PIN IC SOCKET
R25	180 OHM 1/4W 5%	ICS U4-U6	28 PIN IC SOCKET
R26	360 OHM 1/4W 5%	ICS U10	40 PIN IC SOCKET
R27	120K OHM 1/4W 5%	ICS U11	16 PIN IC SOCKET
R28	330K OHM 1/4W 5%	FR1-FB4	FERRITE READ
R29	4.7K OHM 1/4W 5%	JW1-JW5	JUMPER WIRE
R30	510K OHM 1/4W 5%	SW1	PCB SWITCH
R31	120K OHM 1/4W 5%		

M051-00114-A126
TURBO CHEAP SQUEAK
A084-91779-A000

M051-00114-A126
TURBO CHEAP SQUEAK
A084-91779-A000

DESIGNATION LIST

<u>DESIGNATION</u>	<u>DESCRIPTION</u>
LED 1	GREEN LED
U1	CLOCK OSCILLATOR 8MHZ
J1	9 PIN KK100 R/A
J2	12 PIN KK156 R/A
J3	12 PIN KK100 R/A
MTHW 1-4	SPACERS
PCB	TURBO CHEAP SQUEAK


CROSS REFERENCE

<u>DESCRIPTION</u>	<u>OTY</u>	<u>DESIGNATION NO.</u>	<u>PART NUMBER</u>
18PF AX. CR.	1	C1	0C48-00800-0001
68PF AX. CR.	1	C27	0307-00800-0011
100PF AX. CR.	6	C4,C5,C6,C7,C8,C9	0304-00800-0001
150PF AX. CR.	1	C20	0307-00800-0010
270PF AX. CR.	2	C14,C17	0307-00800-0009
390PF AX. CR.	4	C31,C32,C33,C34	0986-00800-3000
470PF AX. CR.	1	C19	0307-00800-0008
680PF AX. CR.	1	C23	0358-00800-0002
820PF AX. CR.	2	C2,C3	0304-00800-0002
.0056MF AX. CR.	1	C16	0307-00800-0007
.01MF AX. CR.	5	CP1-CP11,C11,C13,C24, C28,C29	0986-00800-2200
1MF RAD TANT	5	C15,C18,C21,C22,C26	0307-00800-0004
10MF RAD TANT	2	C10,C30,	0307-00800-0005
47MF AX. ELECT	2	C12,C25	0307-00800-0003
470MF AX. ELECT	2	C35,C36	0A15-00800-0005
100 OHM 1/4WATT 5%	4	R9,R11,R12,R45	100E-00005-0033
150 OHM 1/4WATT 5%	1	R3	100E-00005-0037
180 OHM 1/4WATT 5%	1	R25	100E-00005-0039
360 OHM 1/4WATT 5%	2	R23,R26	100E-00005-0048
1K OHM 1/4WATT 5%	2	R60,R61	100E-00005-0061
2.7K OHM 1/4WATT 5%	2	R24,R49	100E-00005-0071
3.3K OHM 1/4WATT 5%	2	R2,R41	100E-00005-0074
4.7K OHM 1/4WATT 5%	9	R1,R4,R5,R6,R7,R8 R21,R29,R48	100E-00005-0079
10K OHM 1/4WATT 5%	6	R13,R14,R15,R16,R18 R20	100E-00005-0088
18K OHM 1/4WATT 5%	1	R33	100E-00005-0093
24K OHM 1/4WATT 5%	3	R40,R42,R47	100E-00005-0097
33K OHM 1/4WATT 5%	2	R32,R35	100E-00005-0100
47K OHM 1/4WATT 5%	2	R10,R22	100E-00005-0104
82K OHM 1/4WATT 5%	1	R37	100E-00005-0112
100K OHM 1/4WATT 5%	2	R17,R19	100E-00005-0115
110K OHM 1/4WATT 5%	1	R34	100E-00005-0117
120K OHM 1/4WATT 5%	2	R27,R31	100E-00005-0118
150K OHM 1/4WATT 5%	2	R36,R39	100E-00005-0120
160K OHM 1/4WATT 5%	1	R44	100E-00005-0121
330K OHM 1/4WATT 5%	2	R28,R43	100E-00005-0128
510K OHM 1/4WATT 5%	2	R30,R38	100E-00005-0133
560K OHM 1/4WATT 5%	1	R46	100E-00005-0134
MPS3646	1	Q1	104E-00001-0019
2N5305	3	Q2-04	104E-00007-0003
IC 40106	1	IC U12	0304-00803-0056
IC 74LS00	1	IC U9	0A15-00803-0046
IC 74LS02	1	IC U8	0986-00803-7400
IC 74LS76	1	IC U2	0A15-00803-0072
IC 74LS139	1	IC U7	0A15-00803-0051

M051-00114-A126
 TURBO CHEAP SQUEAK
 A084-91779-A000

CROSS REFERENCE


<u>DESCRIPTION</u>	<u>QTY</u>	<u>DESIGNATION NO.</u>	<u>PART NUMBER</u>
IC AD7533	1	IC U11	0304-00803-0055
IC LM359	2	IC U13-U14	0304-00803-0053
IC 3340	1	IC U15	0358-00803-0002
IC 68B09E	1	IC U3	0C48-00803-0001
IC 68R21	1	IC U10	0A15-00803-0074
IC 2K X 8 RAM	1	IC U6	0304-00803-0057
IC EPROM/ROM	2	IC U4-U5	SEE EPROM/ROM CHART
16 PIN IC SOCKET	1	ICS U11	110E-00001-0003
28 PIN IC SOCKET	3	ICS U4-U6	110E-00001-0010
40 PIN IC SOCKET	2	ICS U3,U10	110E-00001-0011
FERRITE BEAD	4	FB1,FB2,FB3,FB4	0316-00804-0002
JUMPER WIRE	5	JW1,JW2,JW3,JW4,JW5	117E-00001-0003
PCB SWITCH	1	SW1	0986-00804-3100
LED GREEN	1	LED 1	119E-00001-0001
CLOCK OSCILLATOR 8MHZ	1	U1	109E-00002-0009
9 PIN KK100 RT ANGLE	1	J1	0017-00021-1269
12 PIN KK156 RT ANGLE	1	J2	0017-00021-1286
12 PIN KK100 RT ANGLE	1	J3	0017-00021-1288
SPACERS	4	MTHW 1-4	0017-00042-0328
TURBO CHEAP SQUEAK	1	PCB	A080-91779-A000

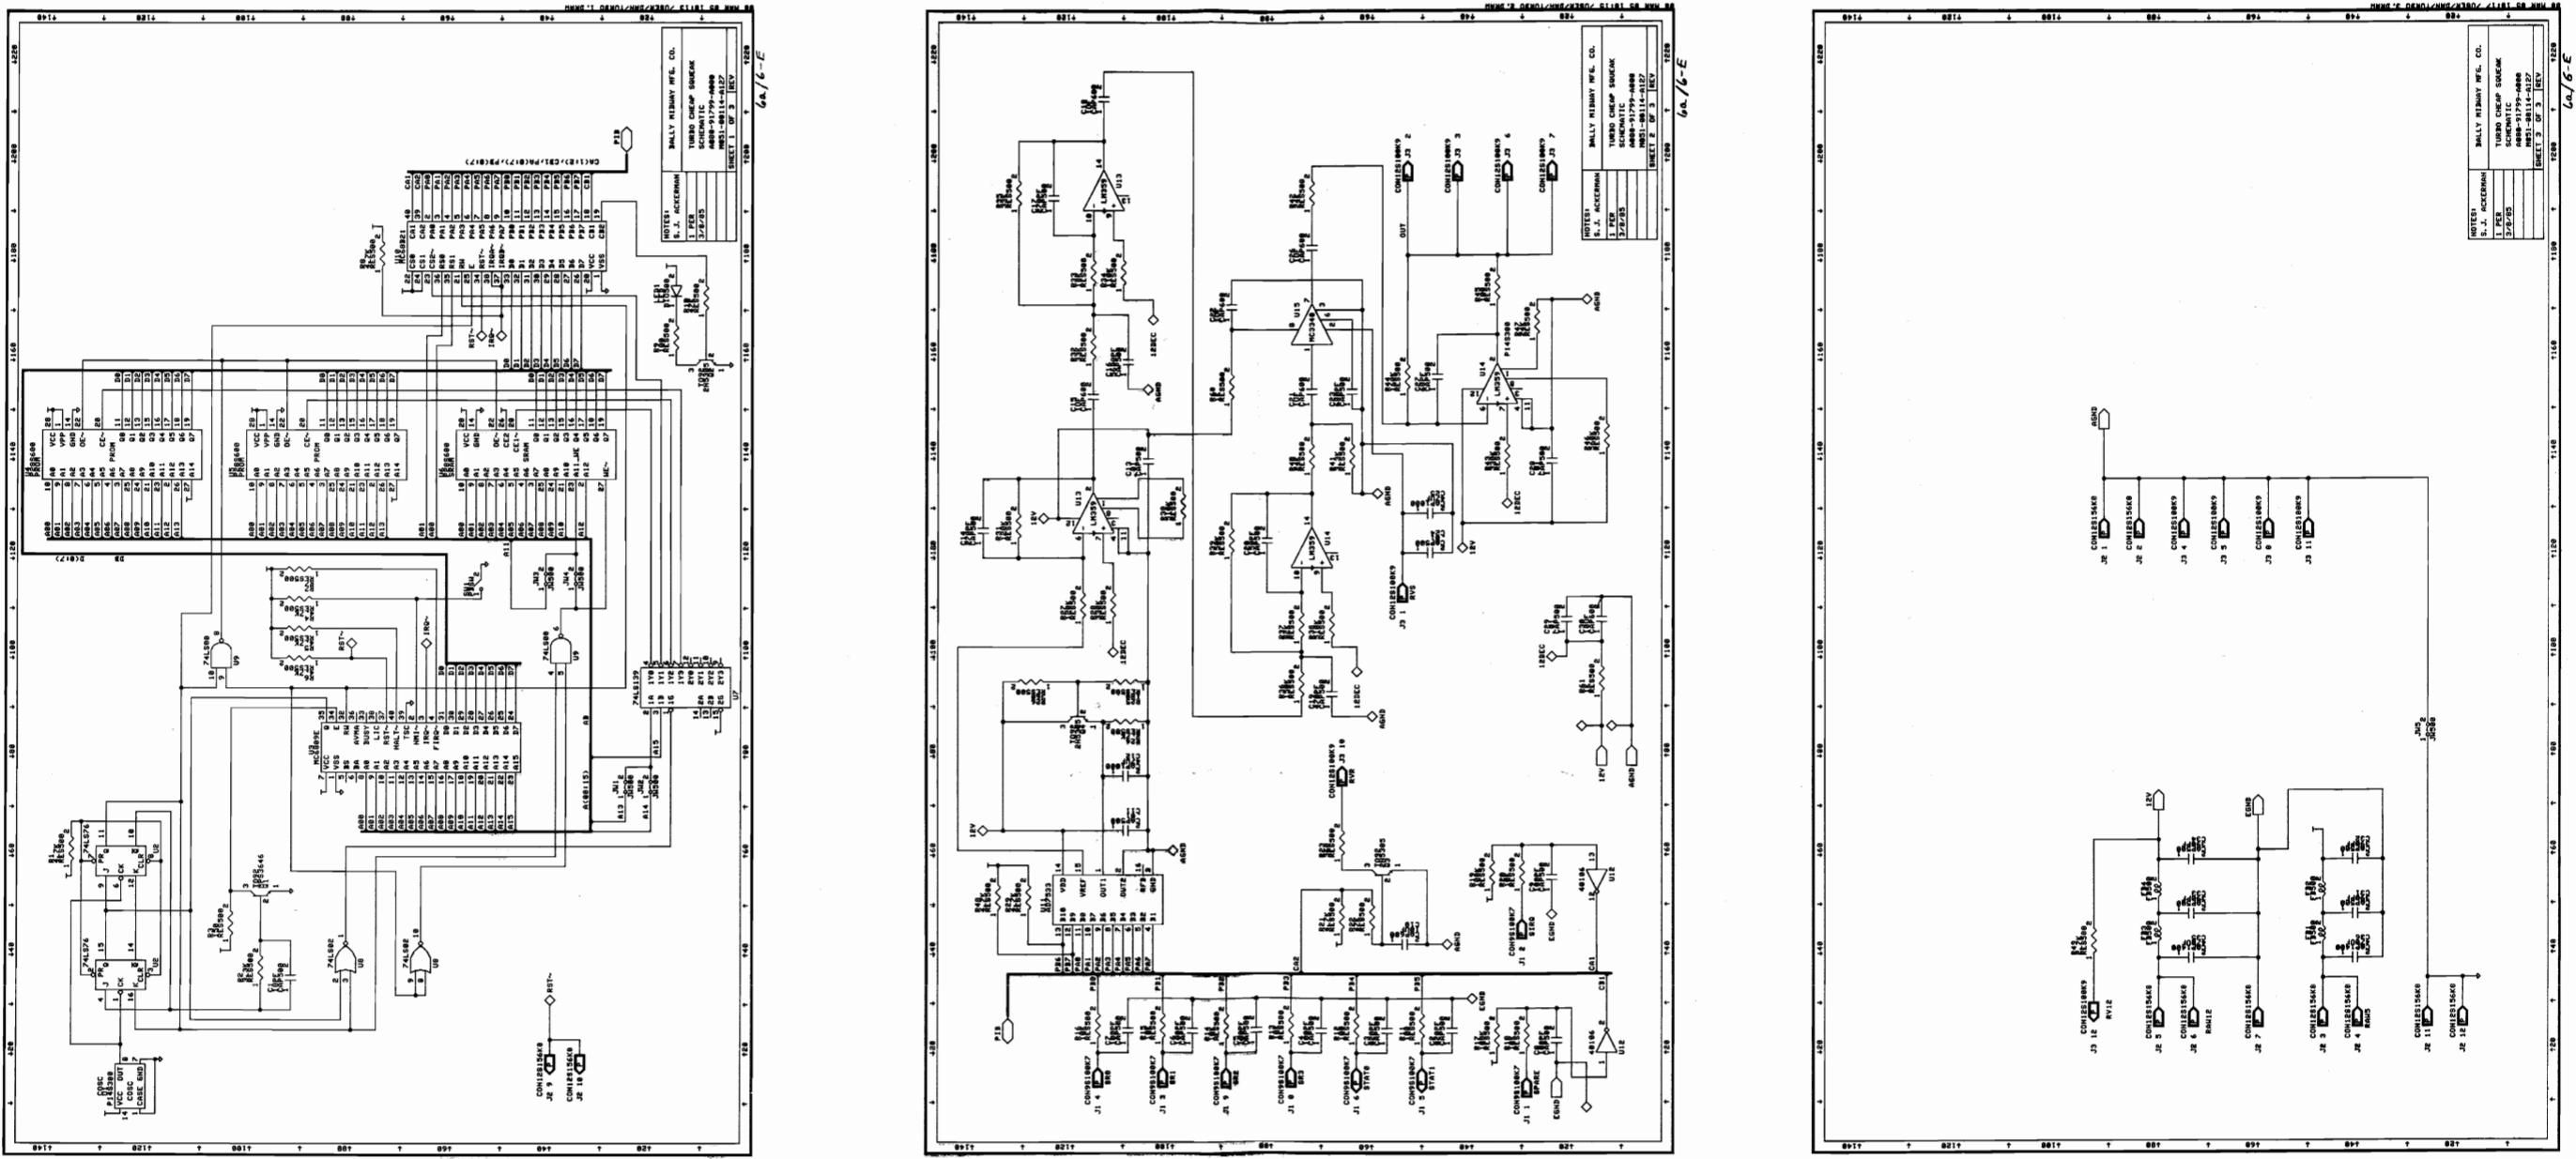

DESIGNATION LIST

DESIGNATION NO.	DESCRIPTION
C1,C2	.4.7 MF 25V RD TANT
C3,C4	22 MF 6V RD TANT
C5,C6	470 MF 6V AX ELEC
C7-C10	.1 MF 50V AX CER
CP1	220 MF 25V AX ELEC
CP2,CP3	.1 MF 50V AX CER
R1,R2	2.7K OHM 1/4W 5% CRBN
R3,R4	27 OHM 1/4W 5% CRBN
R5-R8	1 OHM 1/2W 5% CRBN
U1,U2	MB3730
J1	7 PIN
J2	5 PIN
HSA1,2	HEATSINK ASSY
MH1-MH4	1/4" SPACER

**MCR/2
DUAL POWER AMP. PC.
A082-90910-F000**

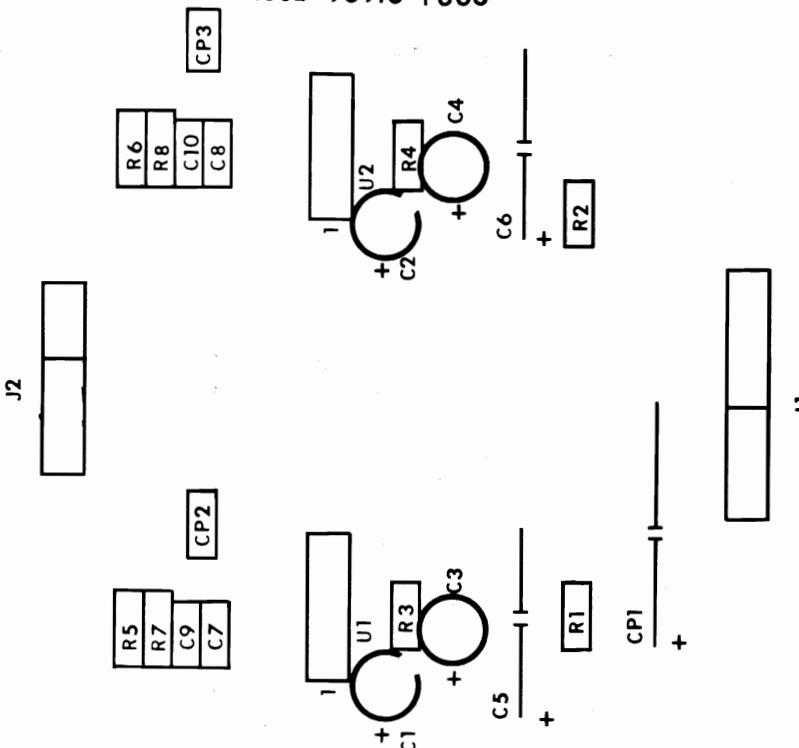

CROSS REFERENCE LIST

DESCRIPTION	QTY	DESIGNATION NO.	PART NUMBER
.1 MF 50V AX CER	6	C7-C10,CP2,CP3	0986-00800-1100
4.7 MF 25V RD TANT	2	C1,C2	0986-00800-3100
22 MF 6V RD TANT	2	C3,C4	0986-00800-1600
220 MF 25V AX ELEC	1	CP1	0986-00800-3200
470 MF 6V AX ELEC	2	C5,C6	0986-00800-1700
1 OHM 1/2W 5%	4	R5-R8	0062-026B3-1XXX
27 OHM 1/4W 5%	2	R3,R4	0062-068B3-1XXX
2.7K OHM 1/4W 5%	2	R1,R2	0062-199B3-1XXX
MB3730	2	U1,U2	0066-188XX-XX4X
TIN .045 SQ PINS	12	J1,J2	0017-00033-0480
HEATSINK ASSY	2	HSA1,2	A986-00010-E000
1/4" SPACER	4	MH1-MH4	0017-00042-0320
PC BOARD	1		A080-90910-F000

PROJECT ENG : C. MEDNICK


THIS DWG IS CONFIDENTIAL & PROPERTY OF BALLY/MIDWAY MFG. CO.

DIM. TOLERANCES		FIRST USED ON	TRON
UNLESS OTHERWISE SPEC.		DRN	DATE
CONCENTRICITY T.I.R. .002		m m	6/14/84
FRACTIONAL ± 1/64		SCALE	44
DECIMAL ± .005		MECH CHK	MATL
HOLE DIA. + .002-.000		ELEC CHK.	FINISH
ANGLE ± 1/2°		DO NOT SCALE DWG.	


Bally/MIDWAY MFG. CO.
FRANKLIN PARK, IL 60131

DUAL PWR AMP
ASSEMBLY DRWNG
A084-90910-F000

REVISIONS
PART NO.
M051-00986-F010

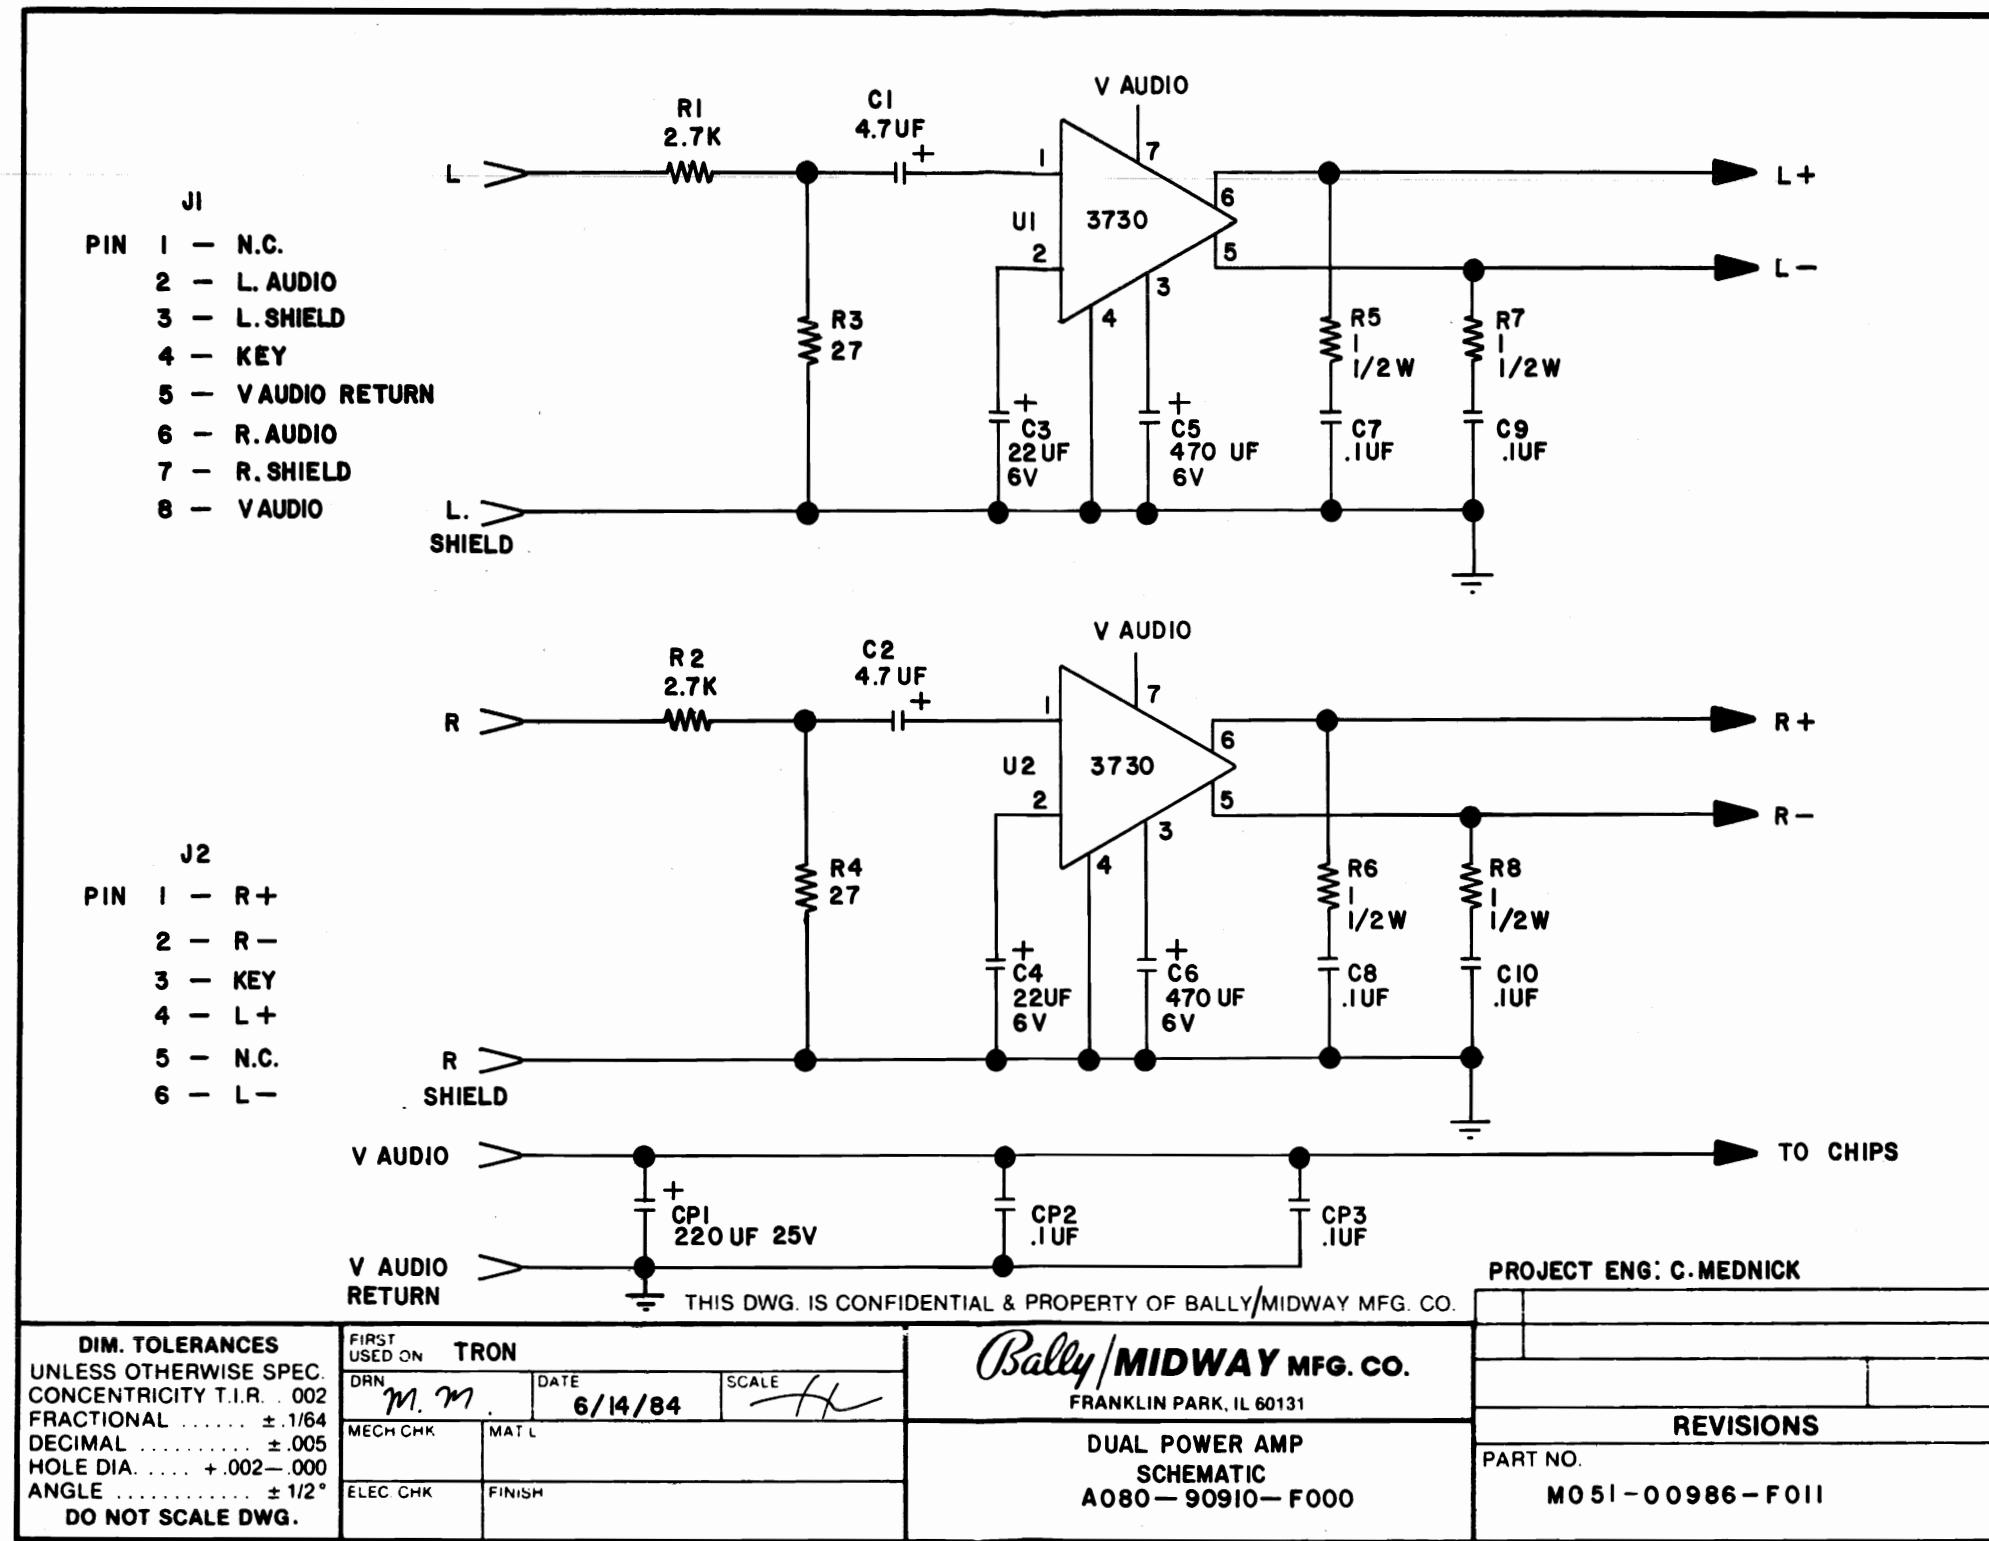

BRUNING-40-107

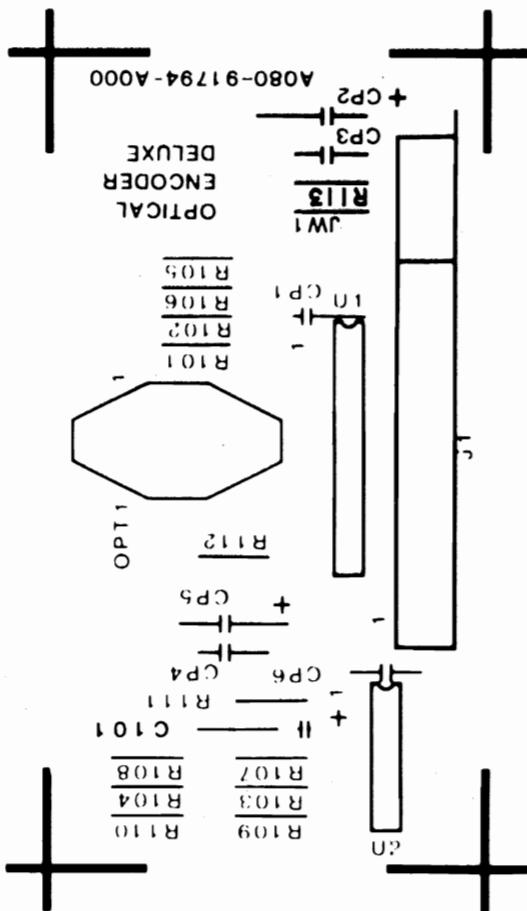

THIS DWG IS CONFIDENTIAL & PROPERTY OF BALLY/MIDWAY MFG CO		Bally/MIDWAY MFG. CO.		OPTICAL ENCODER DELUXE		A080-91794-A000	
		FRANKLIN PARK IL 60131					
DIMS. USED ON DRN C.V DATE 3/8/85 SCALE							
UNLESS OTHERWISE SPEC							
CONCENTRICITY TIR 002 ± 1/64							
FRACTIONAL ± .005							
DECIMAL .002—.000							
HOLE DIA + .002 ± 1/2							
ANGLE DO NOT SCALE DWG.							


M051-00114-A130
OPTICAL ENCODER DELUXE
A084-91794-A000

DESIGNATION LIST


DESIGNATION	DESCRIPTION	DESIGNATION	DESCRIPTION
C101	.01UF AX. CR.	R109-R110	200K OHM 1/4W 5%
CP1	4.7UF RAD. TANT	R111	4.7K OHM 1/4W 5%
CP2	10UF AX. ELECT.	R112	6.2K OHM 1/4W 5%
CP3-CP4	.01UF AX. CR.	R113	3K OHM 1/4W 5%
CP5	10UF AX. ELECT.	OPT 1	OPTO SWITCH DUAL
CP6	.01UF AX. CR.	U1	74LS491
R101-R102	4.7K OHM 1/4W 5%	U2	LM339
R103-R104	200K OHM 1/4W 5%	J1	15 .045 SQ. PIN
R105	6.2K OHM 1/4W 5%	JW1	JUMPER WIRE
R106	82 OHM 1/4W 5%	PCB	OPTICAL ENCODER DELUXE
R107	30K OHM 1/4W 5%		
R108	91K OHM 1/4W 5%		

CROSS REFERENCE

DESCRIPTION	OTY.	DESIGNATION	PART NUMBER
.01UF AX. CR.	4	CP1,CP3-CP4,CP6	0628-00800-0100
4.7UF RAD. TANT	1	C101	0628-00800-0200
10UF AX. ELECT.	2	CP2,CP5	0628-00800-0300
82 OHM 1/4W 5%	1	R106	100E-00005-0031
3K OHM 1/4W 5%	1	R113	100E-00005-0073
4.7K OHM 1/4W 5%	3	R101,R102,R111	100E-00005-0079
6.2K OHM 1/4W 5%	2	R105,R112	100E-00005-0083
30K OHM 1/4W 5%	1	R107	100E-00005-0099
91K OHM 1/4W 5%	1	R108	100E-00005-0113
200K OHM 1/4W 5%	4	R103,R104,R109,R110	100E-00005-0123
74LS491	1	U1	0628-00803-2700
LM339	1	U2	0628-00803-2900
OPTO SWITCH DUAL	1	OPT 1	120E-00001-0010
JUMPER WIRE	1	JW1	117E-00001-0003
15 .045 SQ. PIN	15	J1	0304-00804-0010
OPTICAL ENCODER DELUXE	1	PCB	A080-91794-A000

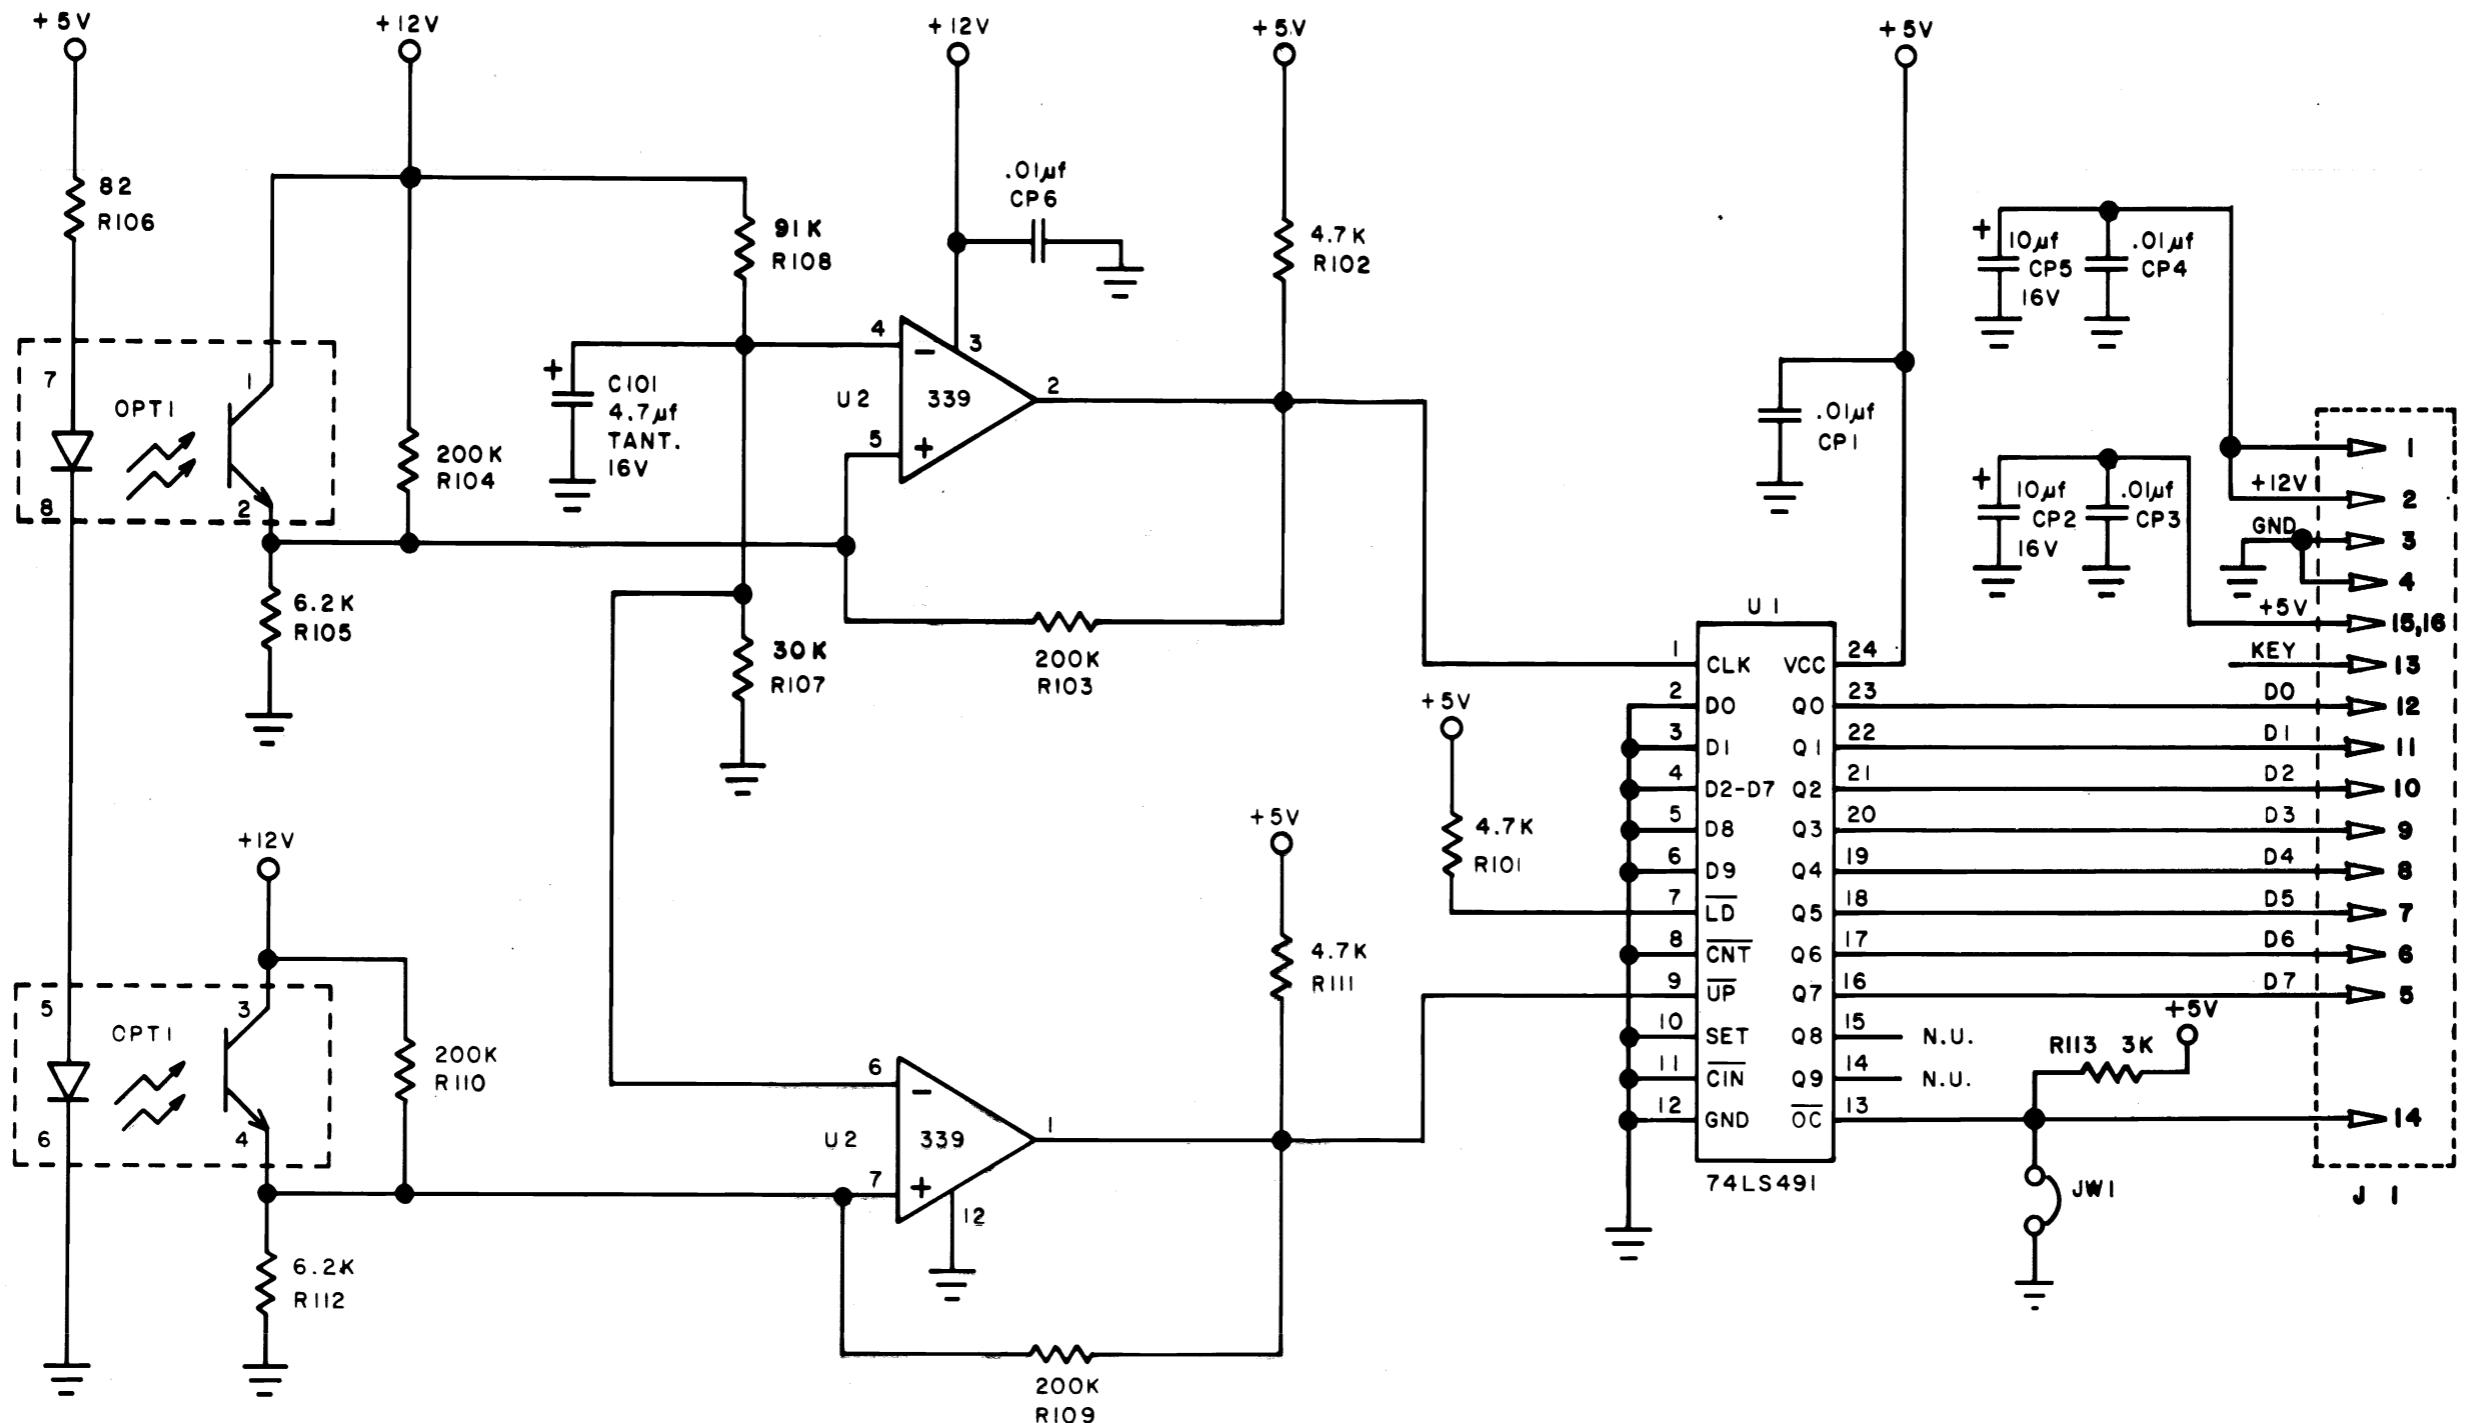

PROJECT ENG JOHN BOYDSTON				USED C	REVISIONS
		HEAT TREAT	SCALE	NO REQ'D 1 PER	
	C.L.				
DRW	C.L.	MATERIAL			
CKD		FINISH			
DATE: 3/8/85		SCHEMATIC DRAWING OPTICAL ENCODER DELUXE A084-91794-A000			PART NO
					M051 - 00114 - A131

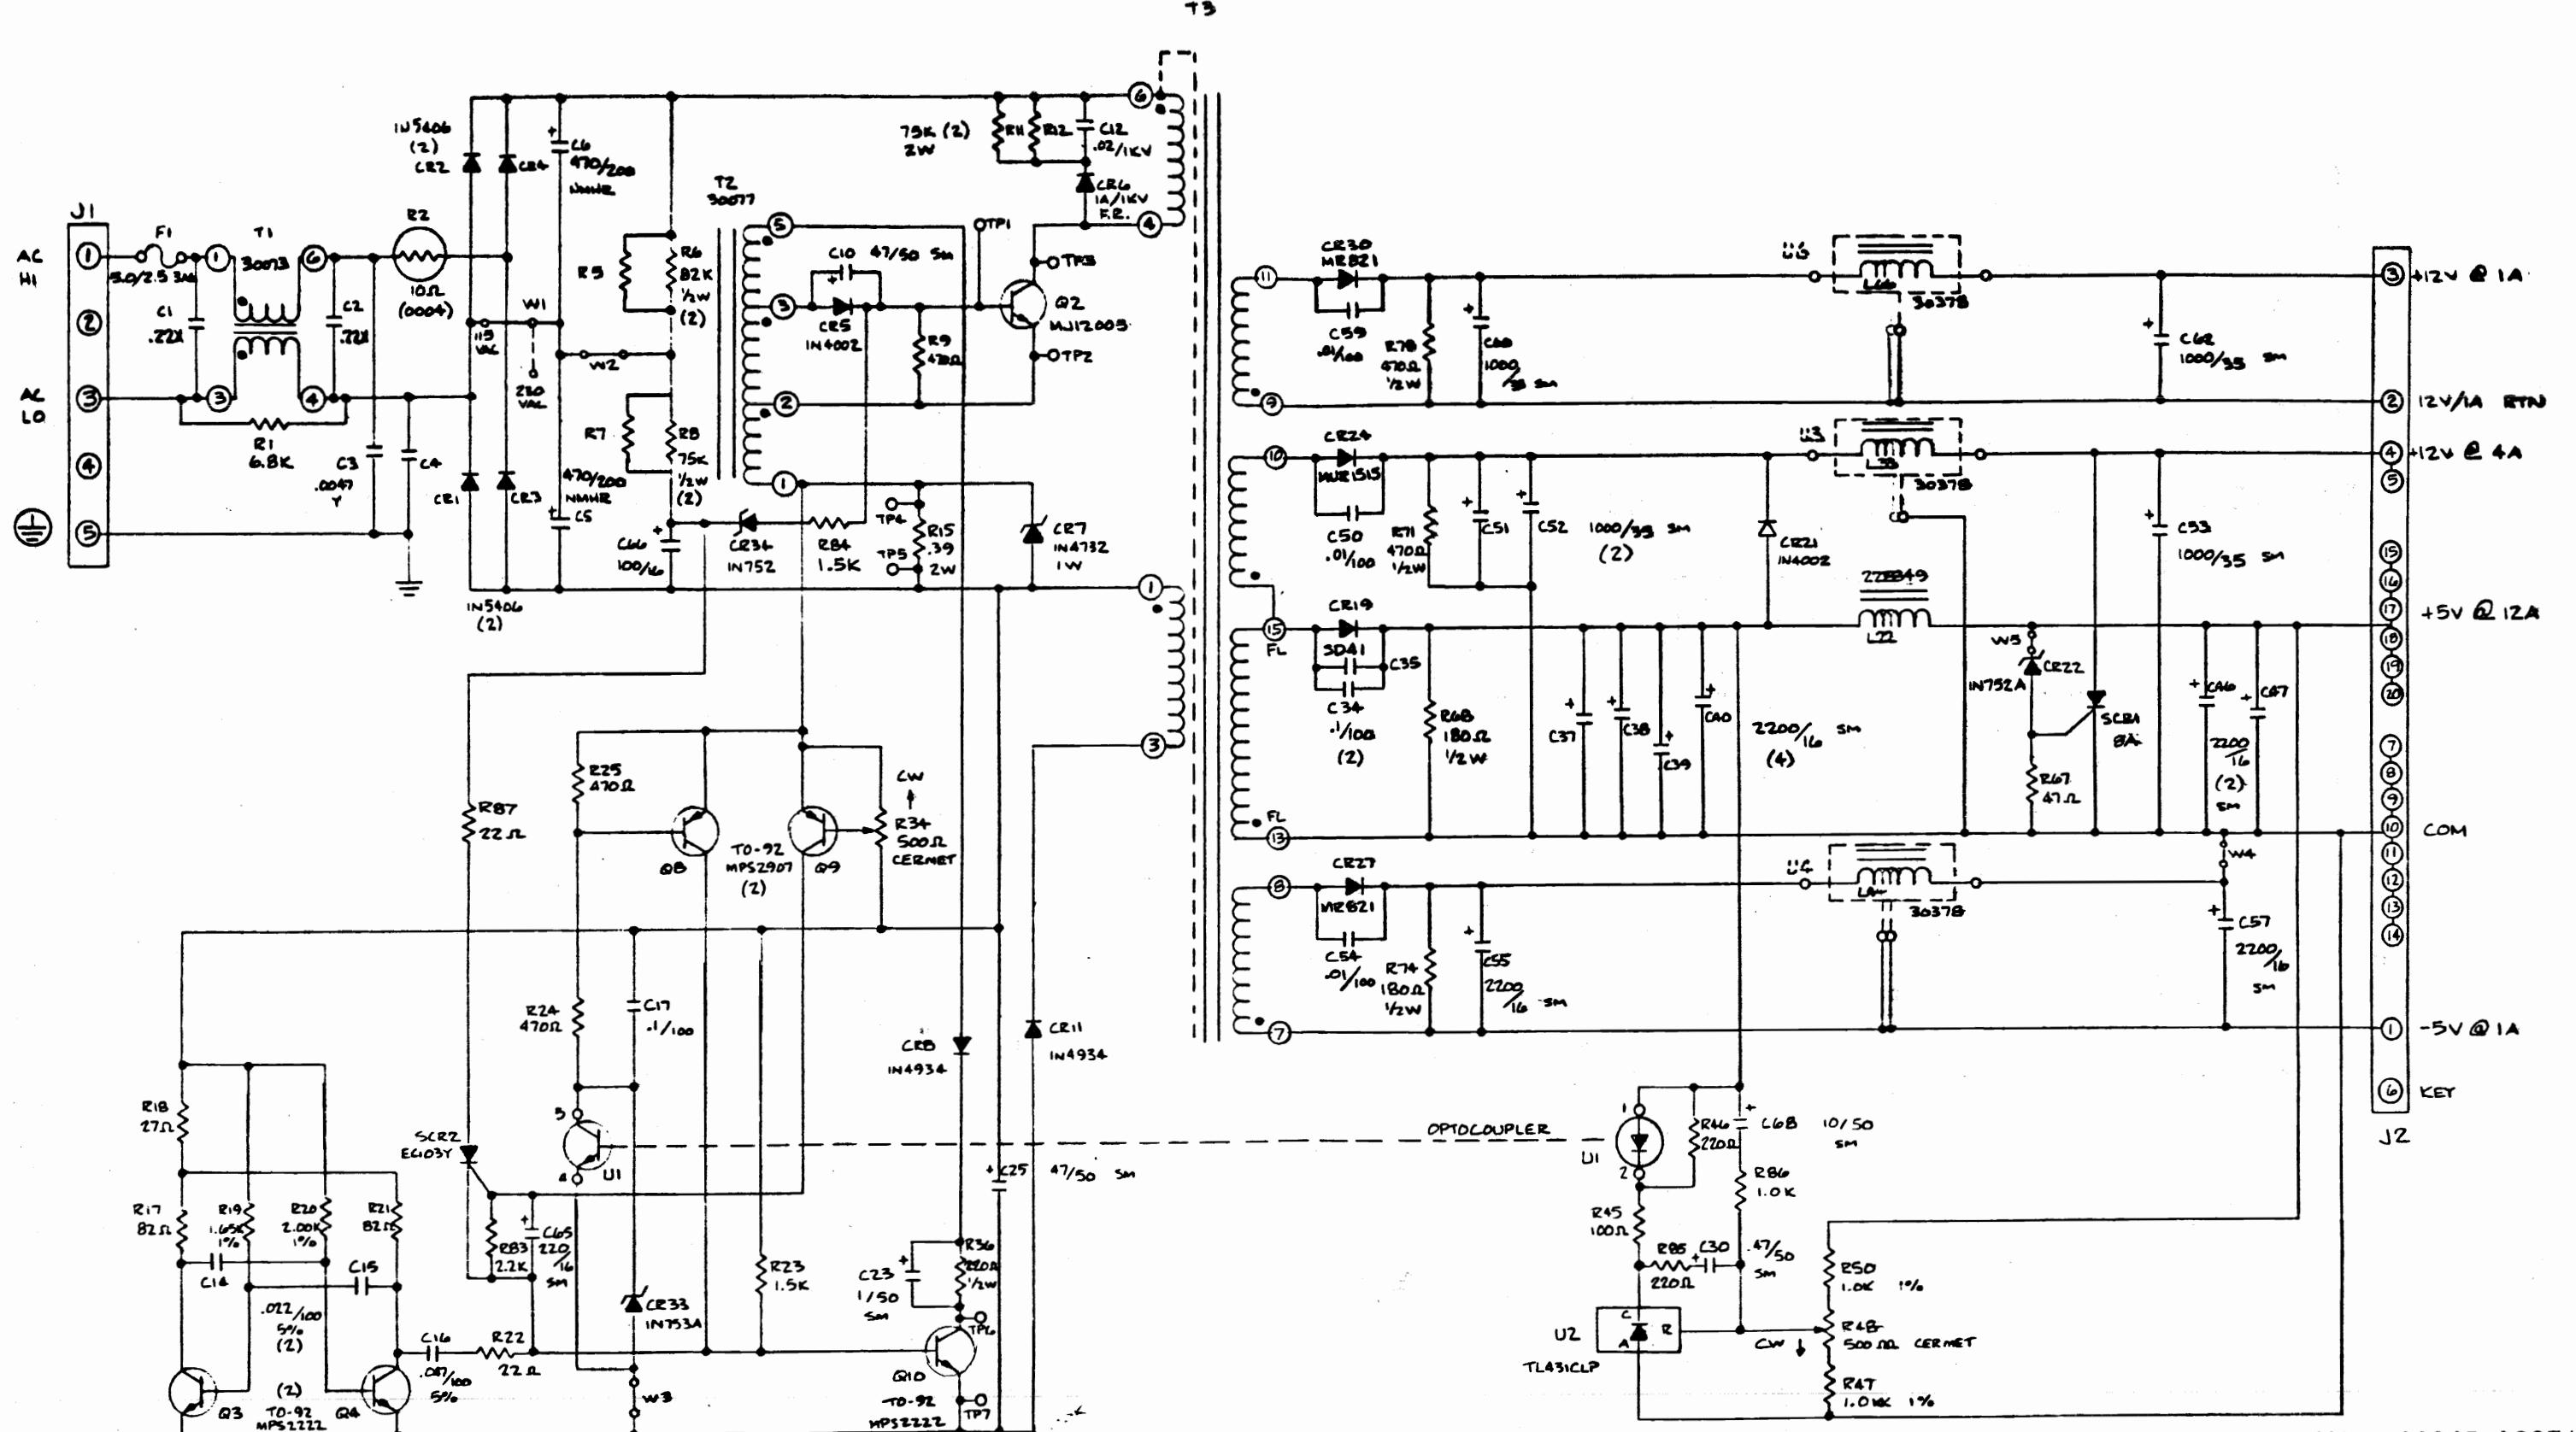

FOR ADDITIONAL ELECTRICAL INFORMATION,
REFER TO MECH. DWG. NO. 0017-00003-0543.


PARTS LIST		DESCRIPTION	MATERIAL
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS DECIMALS AMBIENT XX/XX .XXXX XXX°	CONTRACT NO.	CAMARILLO, CALIF. 93010 (805) 484-2851	CONDOR INC. See Power Supply
	APPROVALS		SCHEMATIC
	DRAWN	S. Whittier 5-10-84	SP1016
	CHECKED		
REVIEWED			
NEXT ASSY	USED ON		
		DO NOT SCALE DRAWING	
			SCALE
			SIZE
			REV.
			D
			31-SP1016
			X

A945-00059-0000/0100/0200
UNI PWR SUPPLY CHASSIS ASS'Y # 125 SWUR + 125 SWCT

	I05	I15	210	220	230	240
BLK	5-8	5-11	8-14	11-14	11-14	11-14
BRN	14-15	14-15	—	—	—	—
BLU	4-7	4-10	4-7	4-7	4-10	4-13

NOTES: 1. JUMPERS ON CONN "A" 3-6 AND 9-12 CAN BE REPLACED WITH A SAFETY SW. AND/OR AUX.ON OFF SW.

2. MODEL A945-00059-0200 HAS A TERMINAL STRIP.
MODEL A945-00059-0100 HAS A ON/OFF SWITCH.
MODEL A945-00059-0000 HAS A ON/OFF SWITCH.

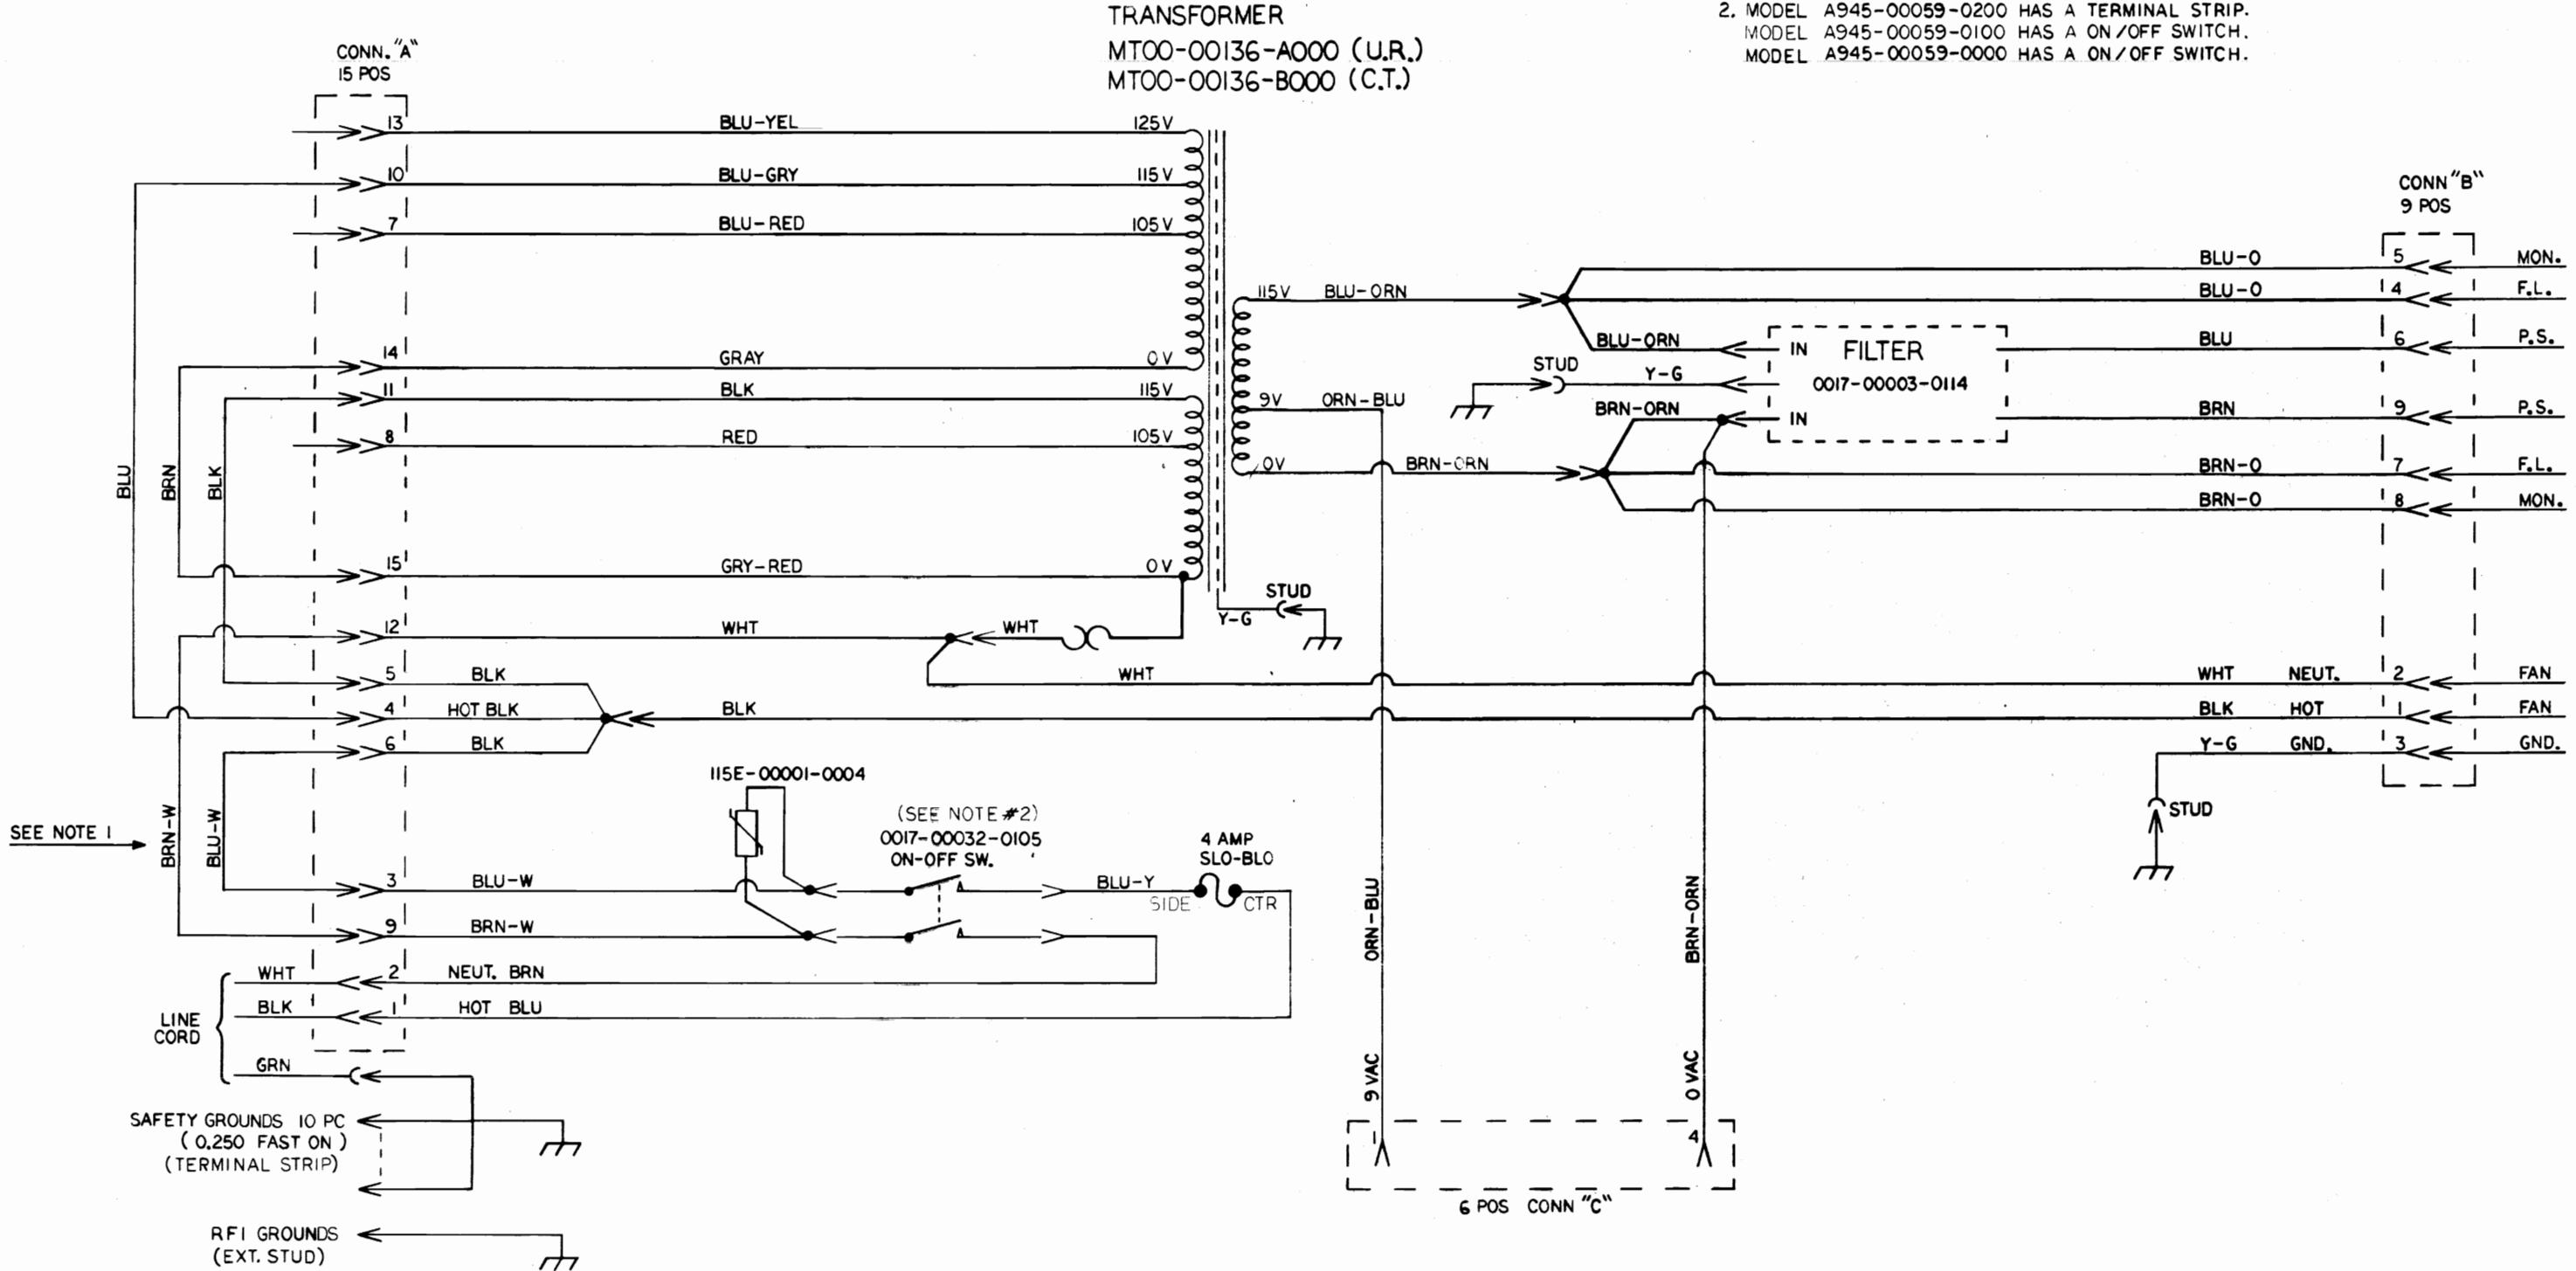


DRAWING # M051-00945-A081

REL FOR PRODUCTION: 4/26/85

Illustrated Parts Breakdown

DEMOLITION DERBY U.R.-2 PLAYER-FRONT

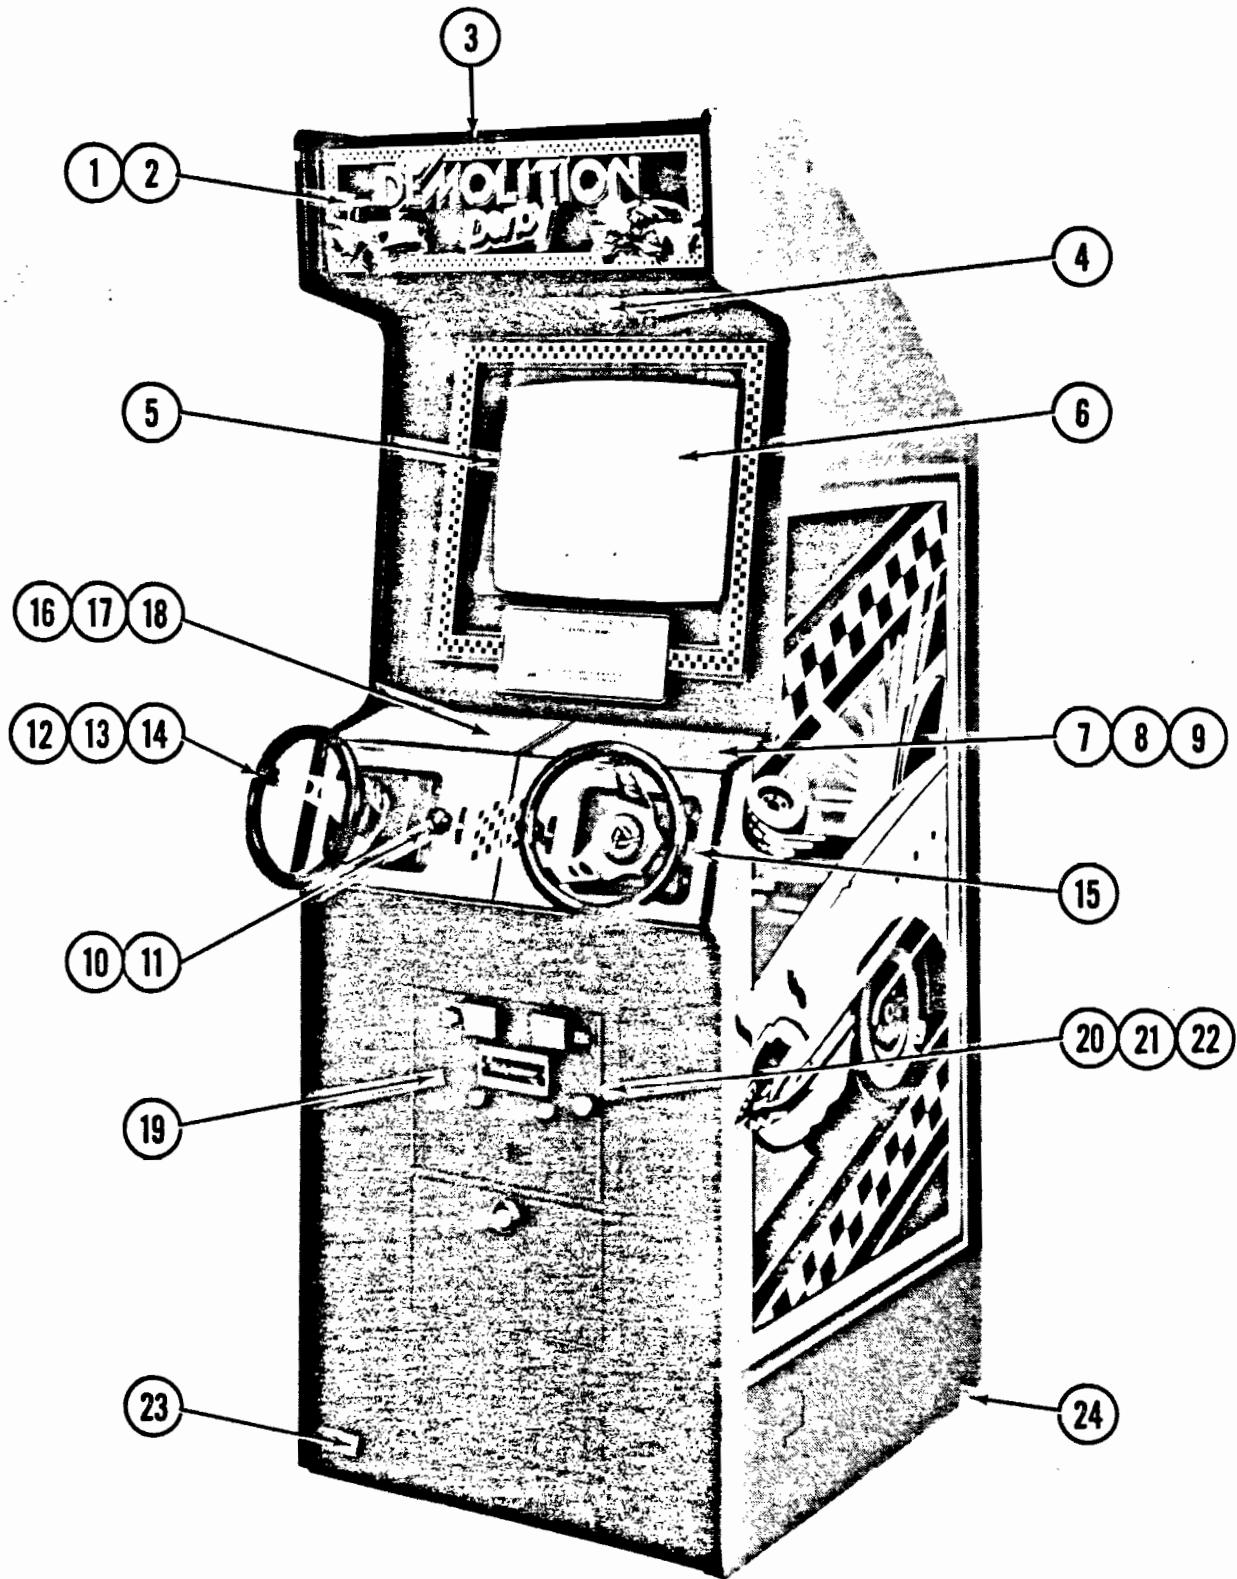

DEMOLITION DERBY U.R. - 2 PLAYER - FRONT PARTS LIST

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	0A59-00900-00XF	HEADER GLASS
2	A595-00011-0000	HEADER FLUORESCENT LIGHT ASSY.
	0017-00003-0026	BALLAST
	0017-00003-0043	FLUORESCENT LAMP
3	0574-00903-0400	HEADER RETAINING BRKT. (2 REQ'D)
*	0017-00101-0138	#8 X 5/8 TORX TAMPER PROOF SCREW (10 REQ'D)
*	0017-00009-0522	LONG ARM KEY T-20. (FOR ABOVE SCREW)
4	0130-00002-0000	BLACK SPEAKER GRILLE W/SLOTS
*	0017-00003-0461	6" X 9" SPEAKER - 4 OHM, 15W.
5	0017-00042-0314	19" T.V. BEZEL - INJECTION MOLDED
6	0A59-00901-00XF	MAIN VIEWING GLASS
	AA59-00013-0000	CONTROL SHELF ASSY. (ITEMS 7 THRU 18)
7	AA59-00011-00XF	CONTROL SHELF WELD ASSY. - DEGREASED
8	0A59-00903-0000	OVERLAY
9	AA59-00006-0000	CONTROL SHELF CABLE ASSY. (NOT SHOWN)
10	AA59-00013-0000	CONTROL ASSY: SPEED SHIFT (2 REQ'D)
11	AB96-00008-0000	BALL KNOB & HANDLE ASSY. (2 REQ'D)
12	AA59-00014-0000	STEERING WHEEL ASSY. (2 REQ'D)
13	AB96-00008-0000	PLATE ASSY. W/BEARING
14	0017-00009-0000	SENSOR DISC ASSY. (2 REQ'D)
15	0C48-00901-0000	CONTROL COVER (2 REQ'D)
*	0017-00009-0534	BASSICK CLAMP (3 REQ'D) (NOT SHOWN)
*		NOT PART OF ABOVE ASSEMBLY & MUST BE ORDERED SEPARATELY

DEMOLITION DERBY U.R. - 2 PLAYER - FRONT PARTS LIST

ORDER BY PART NUMBER **ONLY**

ITEM	PART NO.	DESCRIPTION
16	0017-00042-0260	PUSHBUTTON ASSY. - WHITE (2 REQ'D)
17	0017-00032-0093	PUSHBUTTON SWITCH W/HOLDER (2 REQ'D)
18	0017-00103-0054	5/8 X 11 PAL NUT (2 REQ'D)
19	A982-00014-0000	U.S.A. 25¢ COIN DOOR & CABLE ASSY.
	A090-00620-0200	CASH BOX & ENCLOSURE ASSY. (ITEMS 20 THRU 22)
20	A090-00603-00XF	COIN DOOR FRAME ASSY.
21	A095-00605-0000	CASH BOX DOOR & LOCK ASSY.
	0090-00188-0000	CASH BOX DOOR
	0017-00005-0229	CASH BOX DOOR LOCK
	0017-00005-0239	CAM
22	A090-00606-0000	CASH BOX & PULL ASSY.
23	0935-00906-0100	KICK PLATE - 23" LONG
24	0017-00102-0048	LEG LEVELERS

THE DEMOLITION DERBY U.R. - 2 PLAYER - REAR ACCESS
ILLUSTRATION WAS NOT AVAILABLE AT THE TIME OF MANUAL
PUBLICATION. IT WILL BECOME AVAILABLE IN A SERVICE
BULLETIN.

DEMOLITION DERBY U.R. - 2 PLAYER - REAR ACCESS PARTS LIST

ORDER BY PART NUMBER ONLY


ITEM	PART NO.	DESCRIPTION
1	A945-00062-0000	ON - OFF SWITCH & PLATE ASSY.
2	0894-00916-0000	PLASTIC PULL & VENT (2 REQ'D)
3	0017-00003-0465	WELLS-GARDNER - 19" COLOR DUAL SYNC HORIZONTAL MTG. MONITOR
4	0311-00100-0000	BEZEL MOUNTING BRACKET (2 REQ'D)
5	0017-00042-0314	19" T.V. BEZEL - INJECTION MOLDED
6	A090-00606-0000	CASH BOX & PULL ASSY.
7	A084-90910-F000	DUAL POWER AMP P.C.B. ASSY.
8	A084-91779-AC48	TURBO CHEAP SQUEAK P.C.B.
9	AA59-00004-0000	CARD RACK W/PROGRAMMED CHIPS
	A084-90913-G000	SUPER SOUND I/O P.C.B. ASSY.
	A084-91464-M000	SUPER VIDEO GENERATOR MCR-3 P.C.B.
	A084-91490-J000	5 MHZ C.P.U. P.C.B.
10	A945-00059-0200	POWER CHASSIS: 130VA-SWITCHING'
	115E-00001-0004	VARISTOR METAL OXIDE
	MT00-00136-A000	ISOLATION TRANSFORMER
11	0017-00003-0064	LINE CORD ASSY.
	AA59-00500-0000	CABINET ASSY. (ITEMS 12 & 13)
12	0A59-00500-0000	CABINET ASSY.
13	A961-00007-0000	CASTER - WHEEL ASSY.
		ADDITIONAL PARTS LIST
	AA59-00010-0000	REAR DOOR ASSY. (INCLUDES 5 FOLLOWING PARTS)
	0A59-00501-0000	REAR DOOR (WOOD)
	0017-00005-0050	DOOR LOCK W/2 INDIVIDUAL KEYS

DEMOLITION DERRY U.R. - 2 PLAYER - REAR ACCESS PARTS LIST

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
	0017-00005-0209	LOCK PLATE
	0017-00009-0490	VENT GRILLE - 5-5/8 SQ. IN. (4 REQ'D)
	0639-00116-00XF	CAM - OFFSET 30 DEGREES
	AA59-00007-0000	MASTER CABLE W/BRKT. ASSY. (INCLUDES FOLLOWING PART)
	A515-00021-0000	TEST SWITCH & BRKT. ASSY.
	AA59-00009-0000	HIGH VOLTAGE CABLE ASSY.
	AA11-00011-0000	VIDEO SIGNAL CABLE ASSY.
	0017-00042-0072	GROMMET (8 REQ'D)

DEMOLITION DERBY U.R.-2 PLAYER-STEERING CONTROL ASSEMBLY

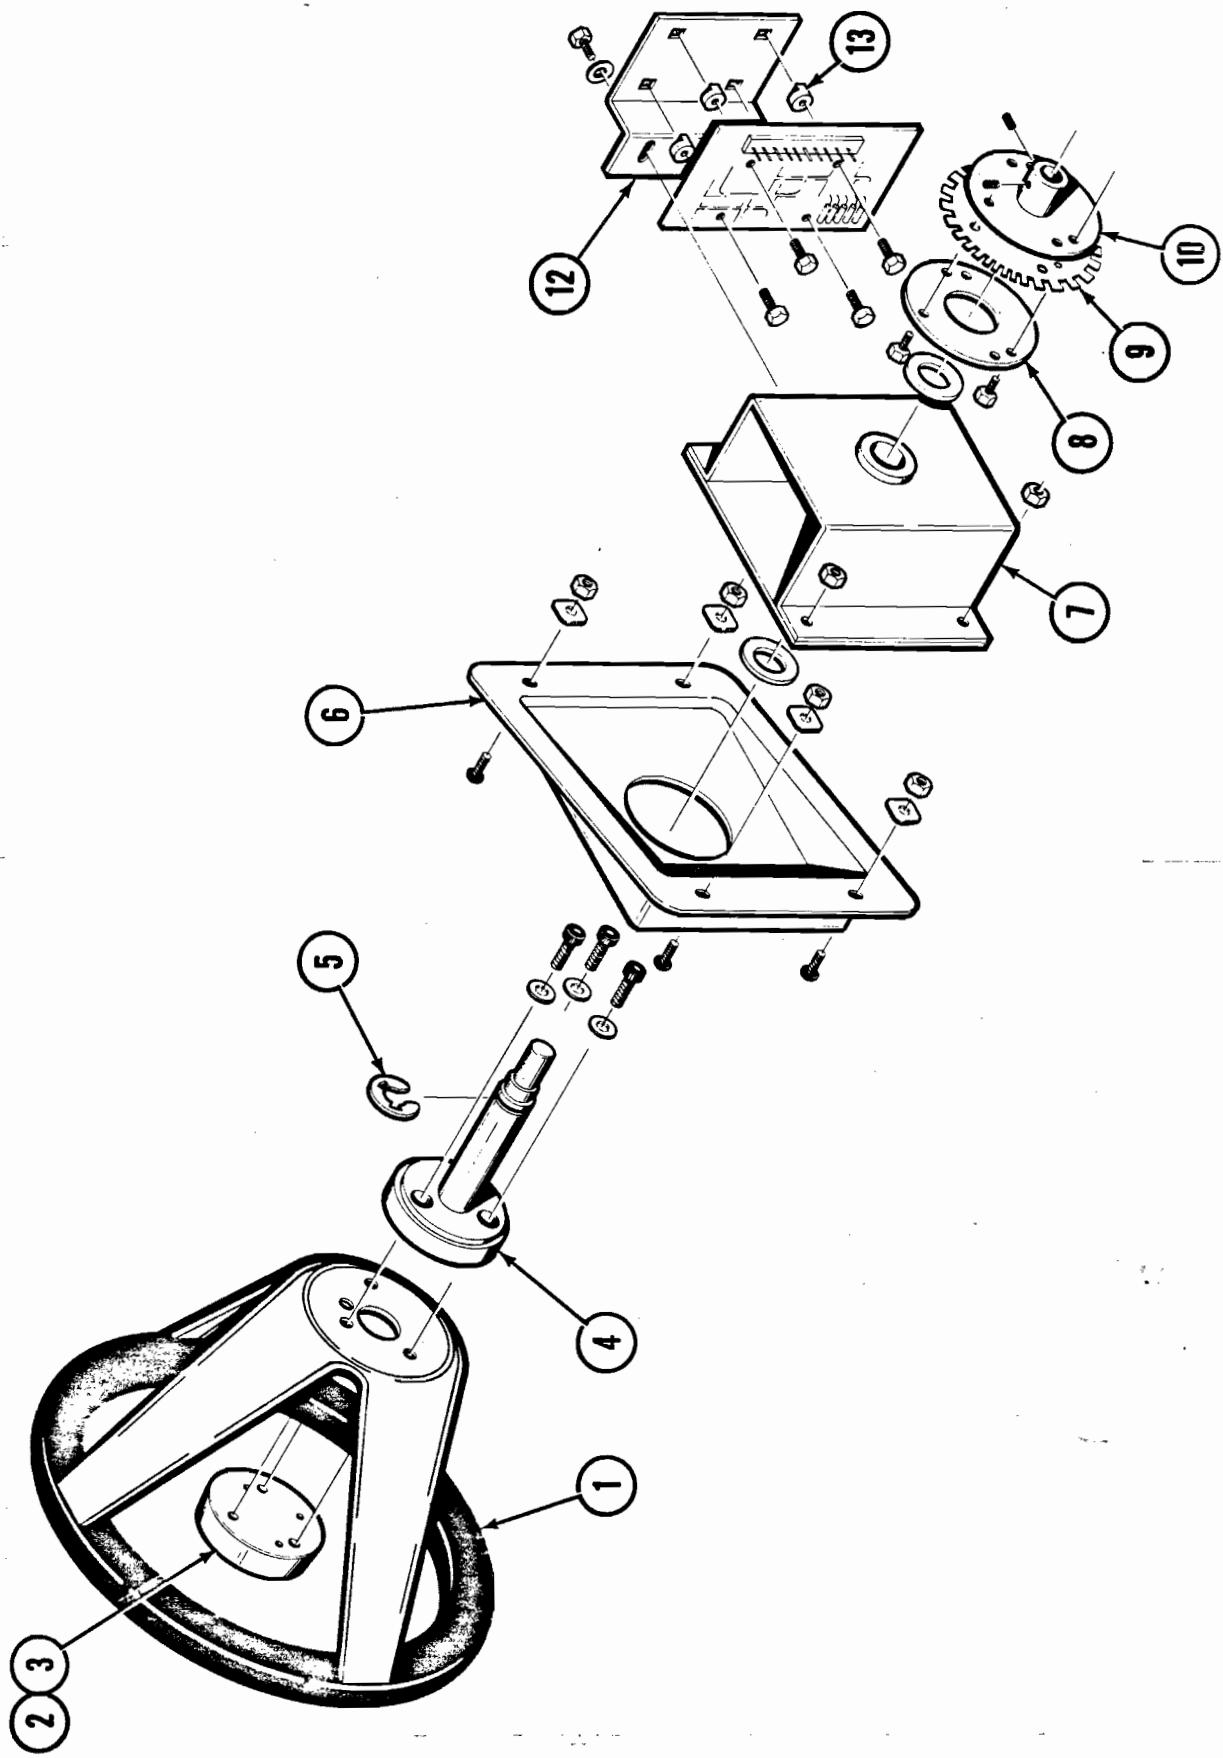


DEMOLITION DERBY U.R. - 2 PLAYER - STEERING CONTROL ASSY. PARTS LIST

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
	AA59-00014-0000	STEERING WHEEL ASSY. (ITEMS 1 THRU 4)
1	0017-00009-0608	STEERING WHEEL
2	0B96-00702-00XF	CAP
3	OC48-00903-0000	INLAY
4	0017-00009-00XF	BASE & SHAFT ASSY.
5	0017-00100-0109	E-RING .750"
6	OC48-00901-0000	CONTROL COVER
7	AB96-00008-0000	PLATE ASSY. W/REARING
	AC48-00030-0000	SENSOR DISC ASSY. (ITEMS 8 THRU 10)
8	OC48-00017-0000	TOP PLATE
9	OC48-00908-0000	64 POSITION DISC.
10	AC48-00029-00XF	HUB & PLATE ASSY.
11	A084-91794-A000	OPTO DECODER DELUXE P.C.B.
12	OC48-00118-0000	P.C. BRACKET
13	0017-00042-0072	GROMMET (4 REQ'D)

DEMOLITION DERBY U.R.-2 PLAYER-SPEED SHIFT CONTROL ASSEMBLY

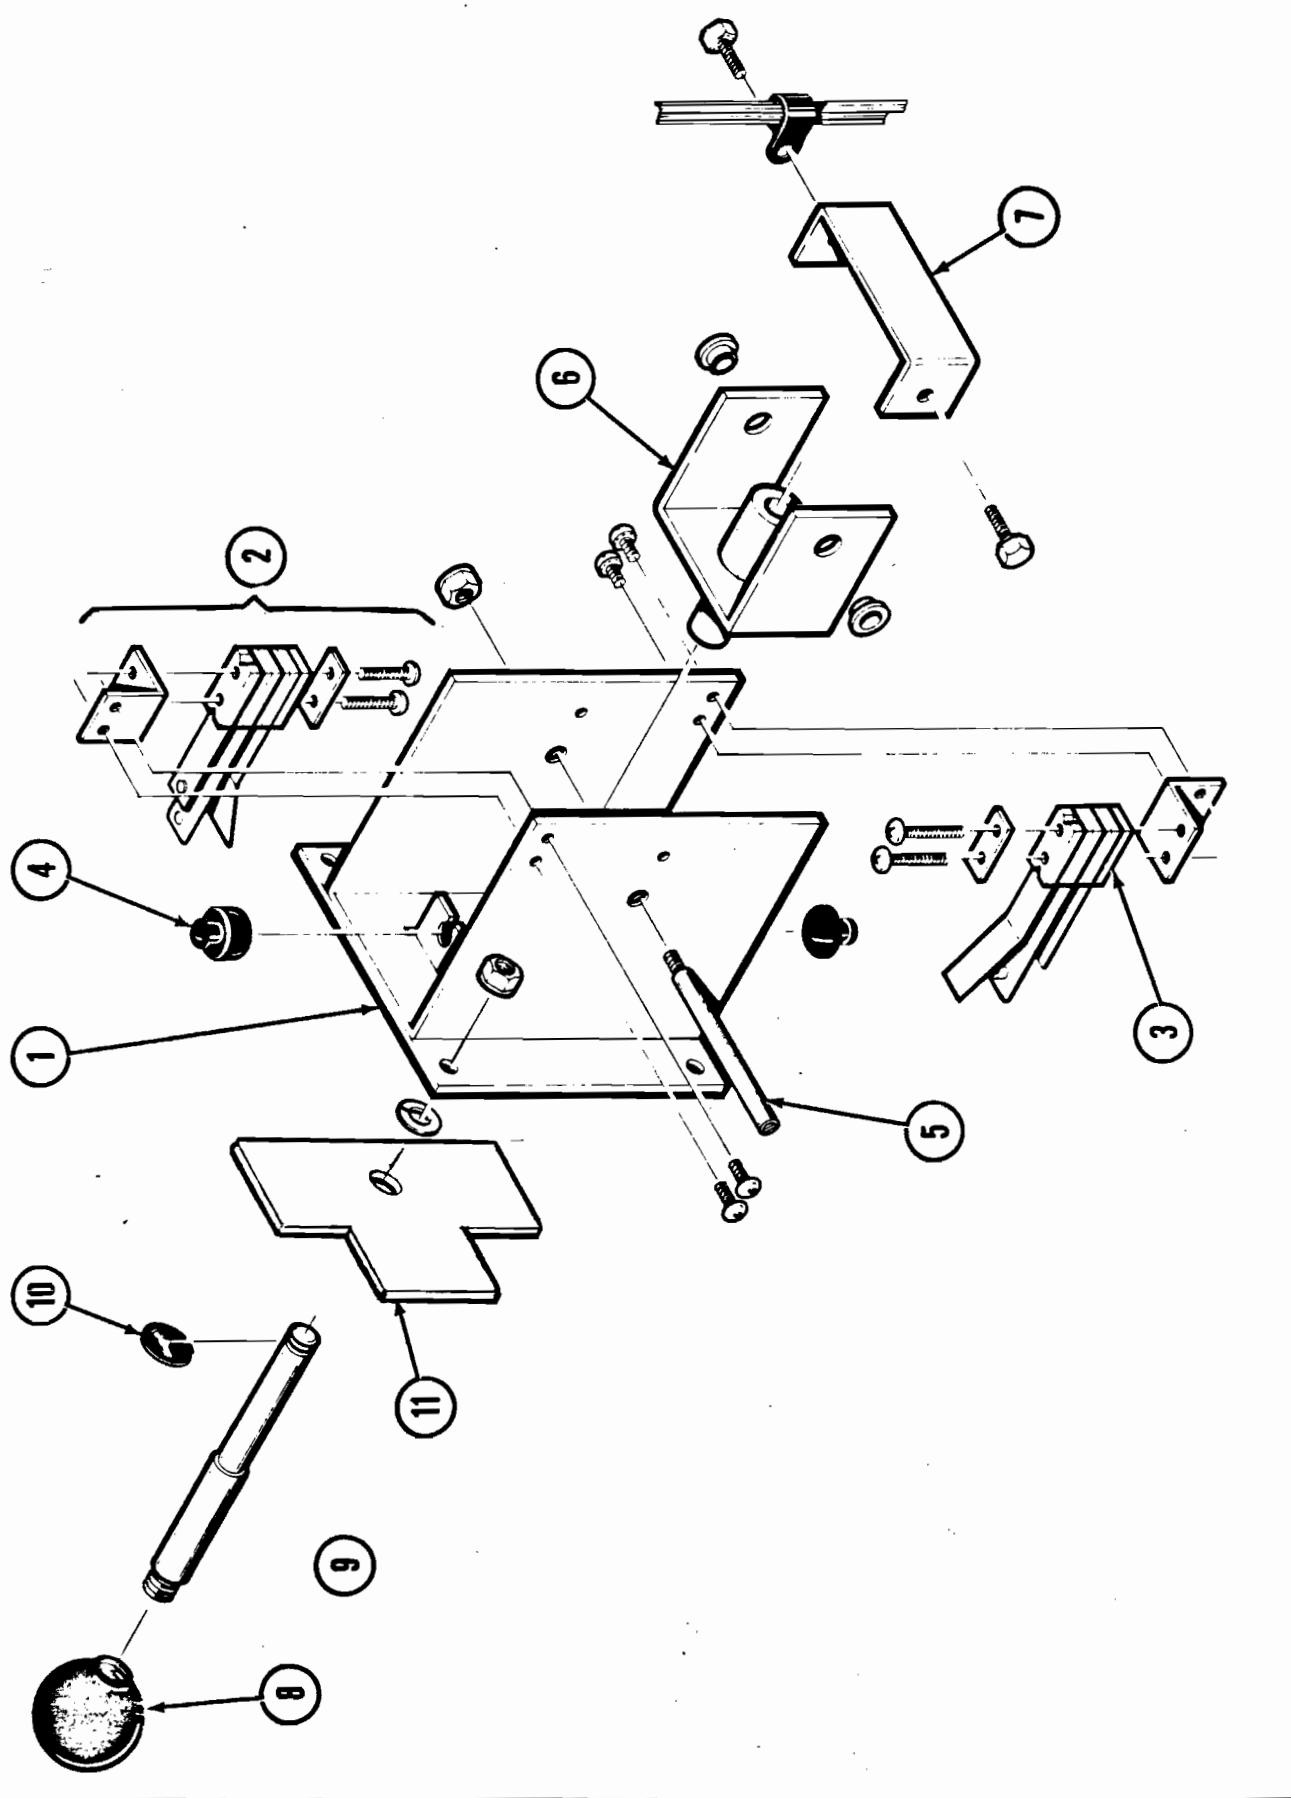


DEMOLITION DERBY U.R. - 2 PLAYER - SPEED SHIFT CONTROL ASSY.- PARTS LIST

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	AA59-00012-0000	YOKE MTG. & PLATE - WELD ASSY.
2	AC48-00015-0000	BRKT. & SWITCH ASSY. (2 REQ'D) (INCLUDING ITEM 3)
3	AC48-00016-0000	LEAF SWITCH ASSY.
4	0017-00041-0616	RUBBER BUMPER (2 REQ'D)
5	0852-00701-00XF	PIVOT PIN
6	AC48-00018-0000	YOKE ASSEMBLY & BEARING
7	0508-00112-0000	MAIN BRACKET BRACE
*	AB96-00012-0000	BALL KNOB & HANDLE ASSY. (ITEMS 8 & 9)
8	0B96-00901-0000	BALL KNOB - BLACK/ROUND
9	0B96-00703-00XF	HANDLE
*10	0017-00100-0031	E-RING .312"
*11	0A59-00904-0000	FOLLOWER
		NOT PART OF ABOVE ASSEMBLY & MUST BE ORDERED SEPARATELY

DEMOLITION DERBY U.R.-2 PLAYER-POWER CHASSIS: 130VA (SWITCHING) PARTS LIST

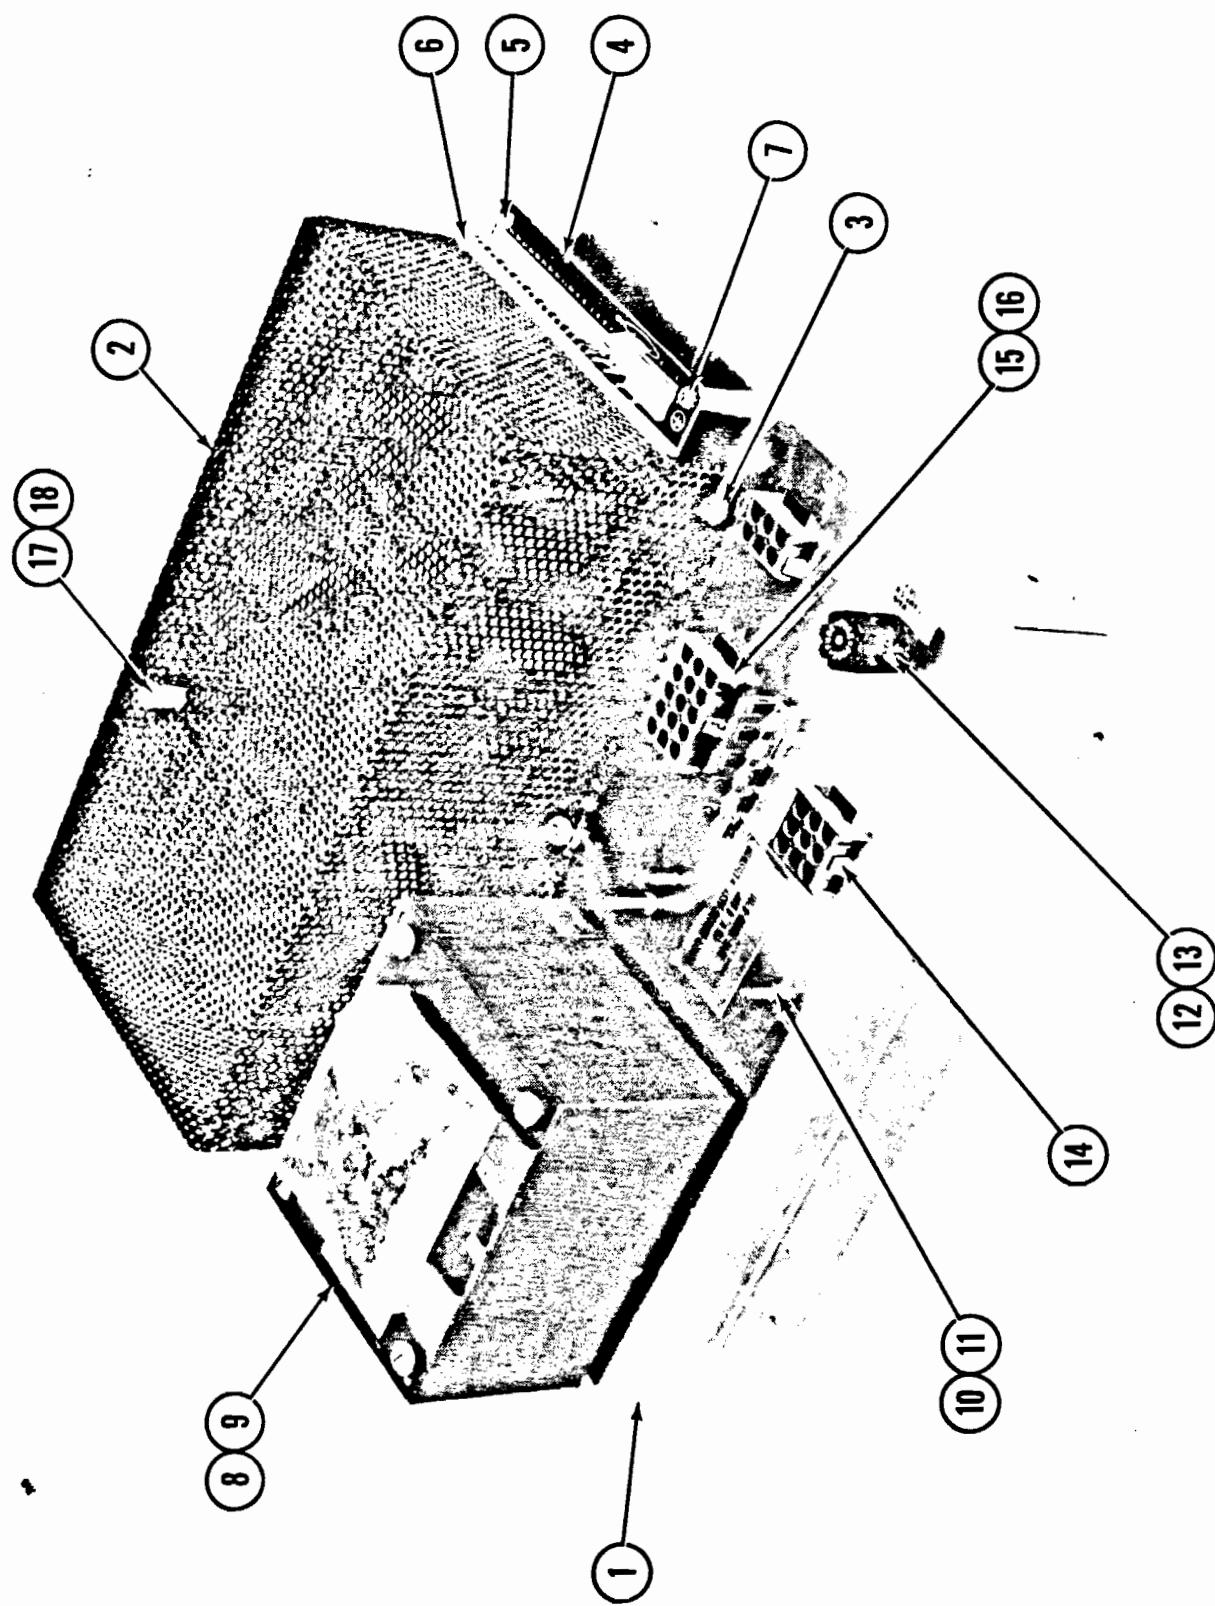


DEMOLITION DERBY U.R. - 2 PLAYER - POWER CHASSIS: 130VA (SWITCHING) PARTS LIST, CONT.

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	A945-00057-01XF	CHASSIS SUB-ASSEMBLY
2	0945-00117-01XF	POWER SUPPLY COVER
3	0017-00101-0123	8 X 4 UNSLOT HEX HD. SCREW (8 REQ'D.)
4	0017-00003-0543	SWITCHING POWER SUPPLY - 125VA
5	0017-00042-0663	LOCKING P.C. BRD. SPACER (4 REQ'D)
6	0540-00138-2100	CABLE PROTECTOR - 5"
7	0017-00101-0134	6-32 X 4 PHIL. ROUND HD. SCREW
8	MT00-00136-A000	ISOLATION TRANSFORMER W/O SHIELD ASSY.-115V., 50/60 HZ.
9	0017-00103-0061	8-32 HEX NUT W/SEMS (4 REQ'D) (NOT SHOWN)
10	0017-00003-0114	LINE FILTER - 5 AMP, 115VAC (NOT SHOWN)
11	0017-00101-0067	6 X 6 PHL. PAN HD. (2 REQ'D)
12	0017-00003-0433	FUSE HOLDER
13	0017-00003-0263	FUSE MDA, 3AG, 4 AMP, 115 VAC
14	A945-00030-0600	CONNECTOR & CABLE ASSEMBLY
15	0017-00021-0370	TERMINAL STRIP
16	0017-00101-0140	4-40 X 5 PHL. PAN HD. SCREW (2 REQ'D)
17	0017-00009-0580	CAPACITOR ALIGNMENT TOOL
18	0945-00912-0000	ADJ. TOOL HANDLE
		ADDITIONAL PARTS LIST
	115E-00001-0004	VARISTOR-METAL OXIDE (UNDER CHASSIS)
	0017-00021-1110	2 POSITION TERMINAL BARRIER STRIP (UNDER CHASSIS)
	0017-00101-0780	6 X 8 PHIL. PAN HD. SCREW (UNDER CHASSIS)
	0017-00103-0084	6-32 HEX NUT W/SEMS (UNDER CHASSIS)

FRONT DOOR ASSEMBLY — U.S.A. 25¢

FRONT DOOR ASSEMBLY
U. S. A. 25¢

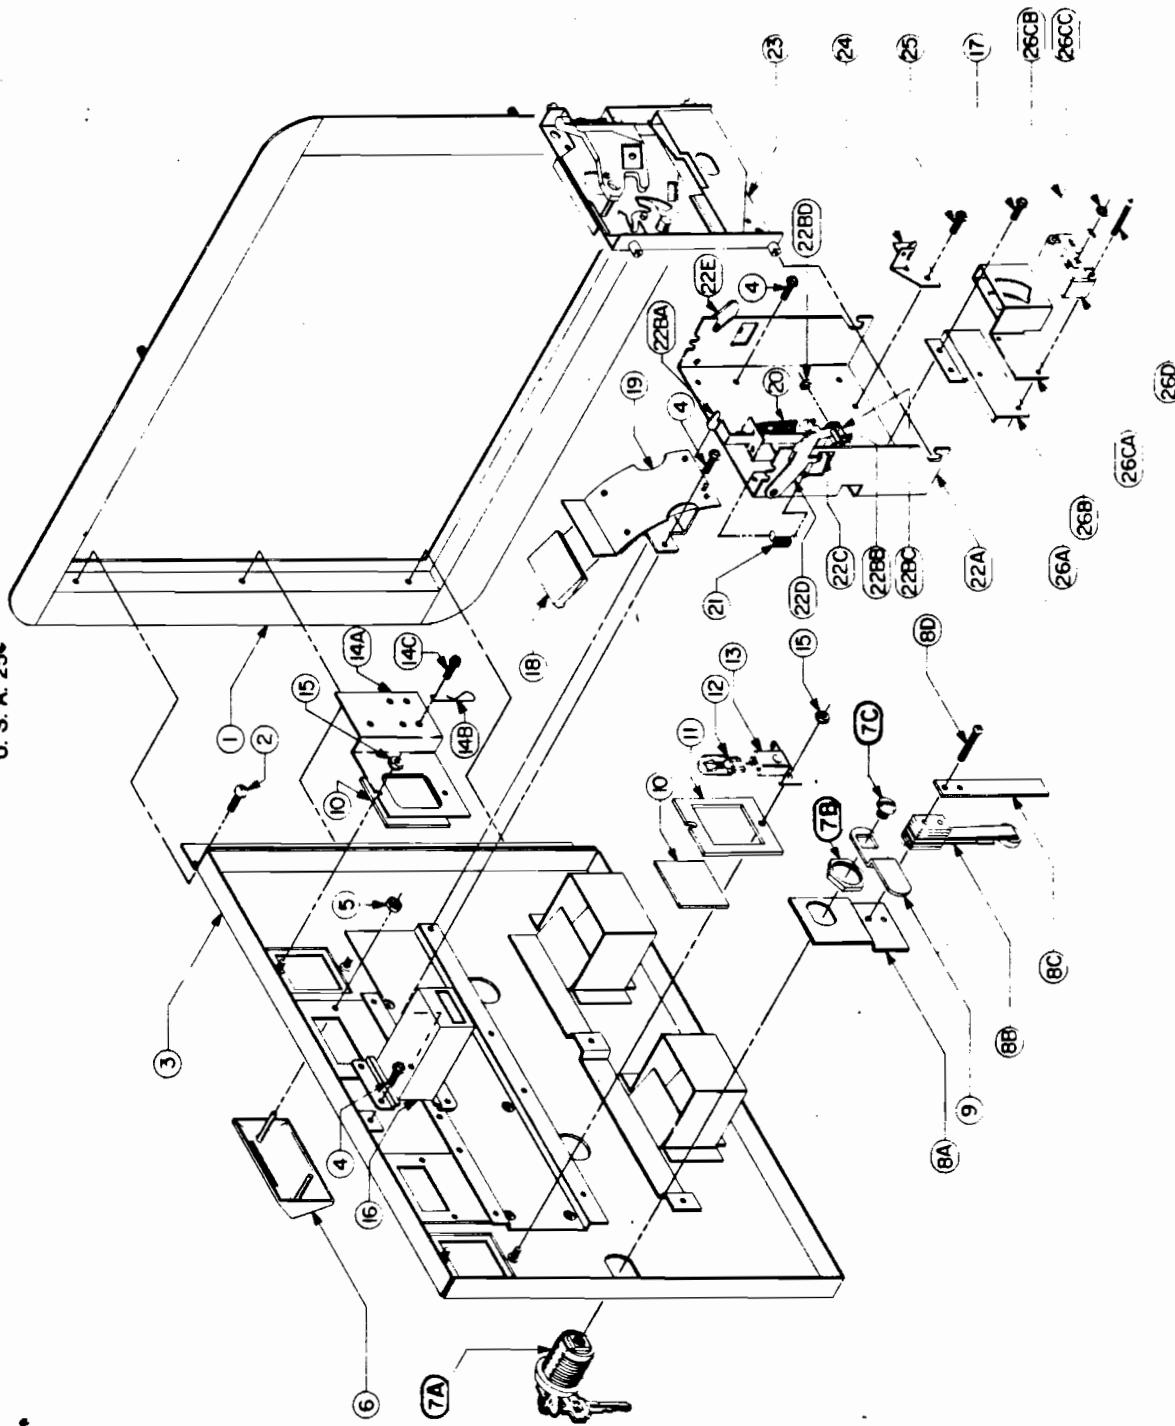

DEMOLITION DERRY U.R. - 2 PLAYER - FRONT DOOR ASSEMBLY - U.S.A. 25¢ - PARTS LIST

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	0090-00002-04BK	DOUBLE ENTRY COIN DOOR FRAME
2	0017-00101-0121	#6-32 X 5/16 PHIL. TRS. HD. SCR. (3 REQ'D.)
3	A090-00073-02BK	DOUBLE ENTRY COIN DOOR W/DRESS PLATE
4	0017-00101-0123	#8 X 1/4 UNSLOT. HEX HD. SCREW (12 REQ'D.)
5	0017-00103-0059	PUSH NUT (4 REQ'D.)
6	0090-00912-0000	COIN ENTRY PLATE - 25¢ (2 REQ'D.)
7A	0017-00005-0200	LOCK - INDIV. KEYED W/2 KEYS
7B	0017-00103-0079	3/4 HEX NUT
7C	0017-00101-0125	#10 X 1/4 SLOT. PAN HD. SCREW
8	A090-00096-0000	ANTI-SLAM SWITCH & BRKT. ASSY.
8A	0090-00185-00XF	DOOR TILT SWITCH BRKT.
8B	A090-00095-0000	DOOR ANTI-SLAM SWITCH
8C	0090-00126-01XF	SWITCH BACK-UP PLATE
8D	0017-00101-0155	#4-40 X 9/16 PHIL. PAN HD. (2 REQ'D.)
9	0017-00005-0238	DOOR CAM
10	0090-00903-9500	25¢ WINDOW (2 REQ'D.)
11	0090-00143-0000	COIN PLEX RETAINER
12	0017-00003-0219	12 VOLT LAMP - G.E. #194 (2 REQ'D.)
13	0017-00031-0048	WEDGE SOCKET W/BRKT. (2 REQ'D.)
14	A090-00100-0000	CABLE & KEY HOOK BRKT. ASSY.
14A	0090-00179-0000	CABLE & SWITCH MTG. BRKT.
14B	0017-00007-0019	KEY HOOK
14C	0017-00101-0123	#8 X 1/4 UNSLOT. HD. SCR. (2 REQ'D.)

\$

DEMOLITION DERBY U.R. - 2 PLAYER - FRONT DOOR ASSEMBLY - U.S.A. 25¢ - PARTS LIST, CONT.

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
15	0017-00103-0084	#6-32 HEX NUT W/SEMS (4 REQ'D.)
16	A090-00089-0000	COIN METER W/DIODE
17	0017-00101-0124	#6 X 1/4 UNSLOT HEX HD. SCR. (4 REQ'D.)
18	0090-00911-0000	INSULATOR (2 REQ'D.)
19	A090-00087-0000	COIN CHUTE & TOP ASSY. (2 REQ'D.)
	A090-00081-00XF	COIN CHUTE & BRKT. ASSY.
	0090-00172-00XF	COIN CHUTE TOP
	0017-00101-0140	#4-40 X 5/16 PHIL. PAN HD. (3 REQ'D.)
	0017-00007-0162	COTTER PIN (4 REQ'D.)
20	0010-00134-0000	SPRING
21	0010-00181-0100	SPRING
22	A090-00115-0000	COIN ACCEPTOR FRAME SUB-ASSY. (2 REQ'D.)
22A	A090-00118-0000	COIN ACCEPTOR & BUSH. ASSY.
22B	A090-00116-0000	REJECT LEVER ASSY. (2 REQ'D.)
22BA	0090-00182-00XF	REJECT LEVER
22BB	0090-00129-00XF	PIVOT POST
22BC	0090-00167-00XF	PIVOT LEVER
22BD	0017-00100-0012	E-RING
22C	0017-00007-0083	1/8 X 1-5/8 ROLL PIN
22D	0093-00145-01XF	LATCH - LEFT
22E	0093-00145-00XF	LATCH - RIGHT
	0017-00072-0036	120 X .218 X 7/32 RIVET (2 REQ'D.)
	0090-00910-00XF	REJECT BUTTON

\$

DEMOLITION DERBY U.R. - 2 PLAYER - FRONT DOOR ASSEMBLY - U.S.A 25¢ - PARTS LIST, CONT.

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
22E	0090-00183-0000	BUTTON STOP
	0017-00101-0140	#4-40 X 5/16 PHIL. PAN HD.
23	0017-00005-0003	COIN ACCEPTOR W/STRING CUTTER (2 REQ'D.) (OR)
23	0017-00005-0214	COIN ACCEPTOR W/STRING CUTTER (2 REQ'D.)
24	A090-00064-0100	ANTI-PENNY DEVICE
25	0017-00101-0099	#6 X 1/4 SLT. HEX HD. M.S. (2 REQ'D.)
26	A090-00077-0000	COIN GUIDE & SWITCH ASSY.
26A	0090-00162-00XF	COIN SWITCH MTG. BRKT.
26B	0017-00005-0203	COIN SWITCH CHUTE
26C	A090-00059-0400	COIN SWITCH & WIRE ASSY.
26CA	0017-00005-0195	COIN SWITCH
26CB	0010-00599-0000	COIN SWITCH WIRE
26CC	0017-00007-0015	PUSH-ON RING
26D	0017-00101-0147	#4-40 X 3/4 PHIL. PAN. HD. (4 REQ'D.)
		ADDITIONAL PARTS LIST
	0090-00184-0000	COIN SWITCH COVER (2 REQ'D.)

BALLY/MIDWAY'S DEMOLITION DERBY (4 PLYR)**C.T. #0C48****ROM/EPROM PART NUMBERS**

UNPROGRAMMED SUPER VIDEO GEN. A084-91464-H000/L000/M000
PROGRAMMED SUPER VIDEO GEN. A084-91464-AC48

POS.	MIDWAY PART NUMBER
1A	0C48-00803-0016
2A	0C48-00803-0015
3A	0C48-00803-0014
4A	0C48-00803-0013
5A	0C48-00803-0012
6A	0C48-00803-0011
7A	0C48-00803-0010
8A	0C48-00803-0009

JUMPERS	IN	OUT
JW1		**
JW2	**	

UNPROGRAMMED 5MHZ CPU A084-91490-H000/J000
PROGRAMMED 5MHZ CPU A084-91490-AC48

POS.	MIDWAY PART NUMBER
5F	0C48-00803-0002
6F	0C48-00803-0003
1C	0C48-00803-0006
2C	0C48-00803-0007
3C	0C48-00803-0008
4C	BLANK

JUMPERS	IN	OUT
JW1		**
JW2		**
JW3	**	
JW4		**
JW5		**
JW6		**

UNPROGRAMMED S/S I/O A084-90913-F000/G000
PROGRAMMED S/S I/O A084-90913-AC48

POS.	MIDWAY PART NUMBER
7A	BLANK
8A	BLANK
9A	BLANK
10A	BLANK

JUMPERS	IN	OUT
JW1		**
JW2		**

UNPROGRAMMED TURBO CHEAP SQUEAK A084-91779-A000
PROGRAMMED TURBO CHEAP SQUEAK A084-91779-AC48

POS.	MIDWAY PART NUMBER
U4	0C48-00803-0005
U5	0C48-00803-0004

JUMPERS	IN	OUT
JW1	**	
JW2		**
JW3		**
JW4	**	
JW5	**	

UNPROGRAMMED OPTICAL ENCODER DELUXE A084-91794-A000

JUMPER	IN	OUT
JW1		**