

ZERO DOWNTIME™

VOLUME 2

NUMBER 5

MAY

© EXIDY INC. 1982

VICTORY HIGH SCORE FREEZE UP

On Victory you may encounter a rare phenomenon in which a player is putting his (or her) initials on the High Score Vanity Table and the game "freezes".

There are two methods of correcting this condition. Once is to reset all the high scores to zero by:

1. Turning game OFF, wait 60 seconds.
2. Turn game ON.
3. Press red option button in coin door.
4. Enter into Option Select menu.
5. Select "Reset High Score Tables".
6. Select "Exit Operator Interface".

The other option is to remove the batteries for the Battery Backup Memory like so:

1. Turn game OFF.
2. Remove batteries from audio PCB board.
3. Wait 60 seconds.
4. Insert batteries back into holders.

The preferred method is just zeroing the high player scores since it is easiest and also if you remove the battery all the preset factory settings are erased.

PEPPER II AUDIO MODIFICATION

On the earliest model of PEPPER II it may be necessary to make this audio modification. At position E-1 on the audio board there may be a resistor and modification wire connecting the resistor in the C-6 slot at position E-1 to the potentiometer R9 at position B/C-1. Remove the resistor and the mod wire. That's it.

If the resistor is left connected in the audio circuit the "bumpa-bumpa-bumpa" sound will not be loud enough to hear over the music. Removal of the resistor makes the "bumpa-bumpa-bumpa" volume more equal to that of the music.

If you have any questions concerning this information, contact Exidy Customer Service at their toll-free number (800) 538-8402 or at (408) 734-9410.

Until next month,

Terry Cunningham
Field Service Manager

