

**Exclusive
"V-Notch"
Sizing
Stops Most
Slugs!**

VERTICAL 8

**THE MOST VERSATILE CHUTE
AVAILABLE TODAY!**

24 WAYS TO GO FROM 0 TO \$2.00 & BACK!

Only Vertical 8 offers you these features:

Unmatched Price Flexibility Just look at these price options:

0 - 10¢ - 20¢ - 25¢ - 35¢ - 45¢ - 50¢ - 60¢ - 70¢ - 75¢ - 85¢ - 95¢ - \$1.00 -
\$1.10 - \$1.20 - \$1.25 - \$1.35 - \$1.45 - \$1.50 - \$1.60 - \$1.70 - \$1.75 -
\$1.85 - \$2.00.

Setting prices is quick and easy, and everything you need to set most prices is included in Vertical 8's spare parts compartment.

Accuracy Vertical 8's exclusive "V-Notch" coin sizing system stops most undersize coins, and even detects the difference

between U.S. and Canadian Quarters.

Tamper - Resistant Vertical 8's tough anti - cheat gate closes coin entry as the slide is pushed forward, effectively blocking free starts.

Value Vertical 8 is quality built to Greenwald's exacting standards for durability and performance. Its 24 price options are exactly what you need for today's market, and tomorrow's too.

The versatile Vertical 8 from Greenwald, an investment in the future of your business.



GREENWALD INDUSTRIES

(713) 821-9000
TOLL FREE:
1-800-221-0982

1340 METROPOLITAN AVENUE
BROOKLYN, N.Y. 11237-1194



Vertical 8 Coin Chute- instructions to change vend prices

The VERTICAL 8 Coin Chute can be set to 24 different vend prices, ranging from 0 (blank) to \$2.00 (8 quarters), by combining quarters and dimes. Only a screwdriver is needed. The Table on page 2 illustrates the position of the coins for each of the 24 vend prices. Note that all eight (8) coin slots can accept a quarter coin and that the two (2) left hand coin slots (#1 and 2) can accept a dime coin as well, after installing a separate Dime Insert. Any one of the eight coin slots can be closed off by means of a Blockout Key, as indicated by the black colored slots in the Table of Vend Prices.

To change the vend price, either up or down, follow these easy steps:

1. Unhook Slide Return Spring and remove the Slide Stop mounted with two (2) screws to chute bottom (Fig. 1). Pull Slide out of Coin Chute.
2. Turn Slide upside down and remove screw that secures the Coin Receiver Block.
3. Remove the Coin Receiver Block from slide as follows:
 - (a) Turn Slide right side up while keeping the Coin Receiver Block in place with fingers.
 - (b) Gently lift Slide from Coin Receiver Block. (If necessary, shake Slide gently to loosen Block).
4. Set your new vend price by either adding or removing the required number of Blockout Keys and/or Dime Inserts from Coin Receiver Block, according to the Table of Vend Prices and as illustrated in Fig. 3. Check that Blockout Keys and/or Dime Inserts are seated properly in slots and that Ratchet Dog is assembled onto its pin and spring is connected to post.
5. Reassemble the Coin Receiver Block into the Slide as follows:
 - (a) Hold Coin Receiver Block in palm of one hand in position shown in Fig. 3, and carefully lower the Slide on top of it until the Coin Receiver Block fits into the Slide cavity. CAUTION: Do not disturb assembly of Ratchet Dog and Spring.
 - (b) Hold Coin Receiver Block in place with fingers and turn Slide upside down.
 - (c) Reinstall screw and tighten securely.
6. Reinstall Slide into Chute. (Note: To clear Slide, push Anti-Cheat Gate inside flange to the left). Reassemble Slide Stop with (2) screws and reconnect Slide Return Spring.
7. Change decals on slide handle and Casting flange to suit new vend price.

NOTES:

1. Unless otherwise ordered, all factory-supplied VERTICAL 8 Coin Chutes are equipped with Coin Sizing Block ("V"-Block), P/N 20-3007, assembled inside the Top Housing with two (2) screws. This part provides for all listed vend prices, up to \$1.85, except those incorporating two (2) dimes. To change vend price to \$2.00 or to a price incorporating two (2) dimes, replace Coin Sizing Block with P/N 20-3008 or P/N 20-3006, respectively. Removal of Top Housing from chute is necessary to replace Coin Sizing Block. Fig. 4 illustrates the various coin sizing Blocks.
2. The Slide Bottom incorporates a Spare Parts Compartment, which houses two (2) Blockout Keys and one (1) Dime Insert on all factory-supplied coin chutes. (See Fig. 2). This compartment is designed to store any extra Blockout Keys (up to four), Dime Inserts, etc., removed from the coin chute. Make sure to tighten screw securely after assembling the compartment's Cover.
3. Refer to INS.-1965 for detailed parts list of coin chute.

INSTALLATION INSTRUCTIONS


INS. 1980

SHEET 2 OF 2


TABLE OF VEND PRICES

VEND PRICE	COIN SLOTS							
	1	2	3	4	5	6	7	8
0	█	█	█	█	█	█	█	█
10¢	□	█	█	█	█	█	█	█
20¢	□	□	█	█	█	█	█	█
25¢	█	█	□	█	█	█	█	█
35¢	□	█	□	█	█	█	█	█
45¢	□	□	█	█	█	█	█	█
50¢	█	█	□	□	█	█	█	█
60¢	□	█	□	█	█	█	█	█
70¢	□	□	█	█	█	█	█	█
75¢	█	█	□	□	█	█	█	█
85¢	□	█	□	█	█	█	█	█
95¢	□	□	□	█	█	█	█	█
\$1.00	█	█	□	□	□	□	□	□
\$1.10	□	█	□	□	□	□	□	□
\$1.20	□	□	□	□	□	█	█	█
\$1.25	█	□	□	□	□	█	█	█
\$1.35	□	█	□	□	□	█	█	█
\$1.45	□	□	□	□	□	█	█	█
\$1.50	█	□	□	□	□	█	█	█
\$1.60	□	□	□	□	□	█	█	█
\$1.70	□	□	□	□	□	█	█	█
\$1.75	█	□	□	□	□	█	█	█
\$1.85	□	□	□	□	□	█	█	█
\$2.00	□	□	□	□	□	█	█	█

NOTES: 1. BLACK COLORED SLOTS ARE CLOSED OFF BY BLOCKOUT KEY.

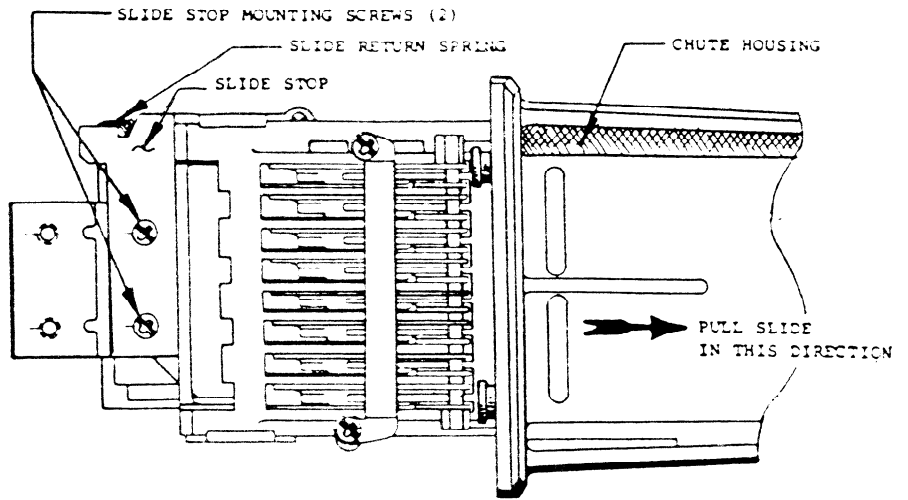


BOTTOM VIEW
FIGURE #1

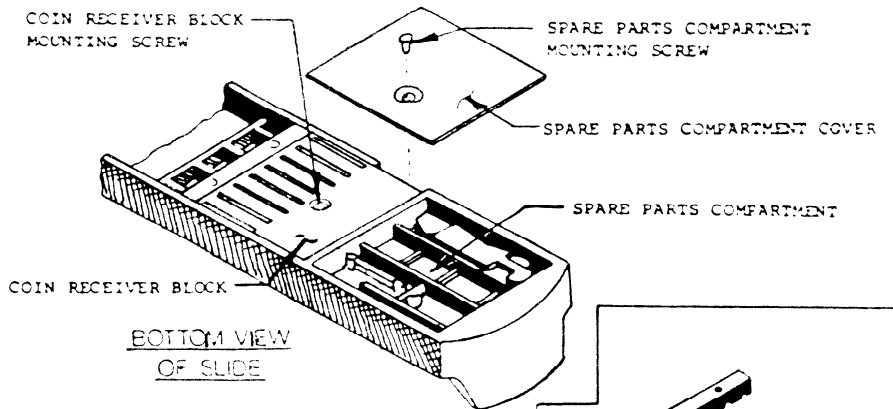

BOTTOM VIEW
OF SLIDE

FIGURE #2

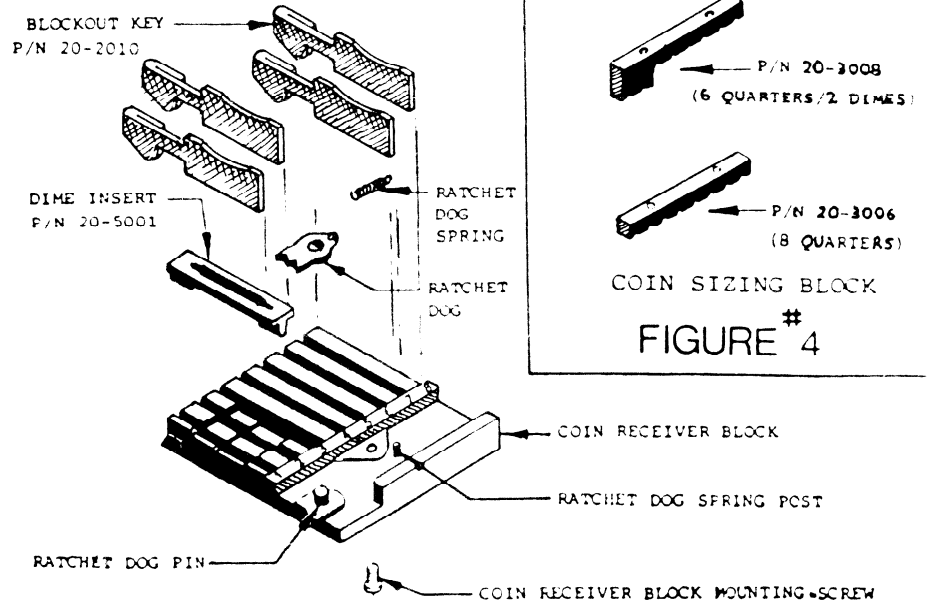

COIN SIZING BLOCK
FIGURE #4

FIGURE #3