
CHP1-UP-US

ADJUSTMENTS

1. Option Switch Settings


You can set Game Price, Game Difficulty, Time, Attract Music, Rematch, and Self-Test on the Game PCB.

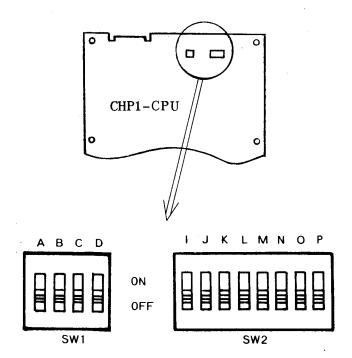

Game Price

	Toggle(SW1) Settings						
credit/coin	Α	В	С	D			
1/3	OFF	OFF	ON	ON			
1/2	ON	OFF	OFF	OFF			
1/1	OFF	OFF	OFF	OFF			
2/1	OFF	ON	OFF	OFF			
3/1	ON	0FF	ON	OFF			
4/1	OFF	ON	ON	OFF			
5/1	OFF	ON	OFF	ON			
6/1	ON	ON	ON	OFF			
Freep1ay	ON	ON	ON	ON			

			Toggle		(SW2)		Settings		
·		I	J	K	L	М	N	0	P
Game Difficul	ty								
Easy Hard	(0) (1) (2) (3)	OFF ON OFF ON	OFF OFF ON ON						
Time									
Long Short	(0) (1) (2) (3)			OFF ON OFF ON	OFF OFF ON ON				
Attract Music									
Silent With Music	(0) (1)					OFF ON			
Rematch at a	discount								
No Yes	(0) (1)						OFF ON		
Self-Test/Game	е								
Game Self-Test	(0) (1)								OFF ON

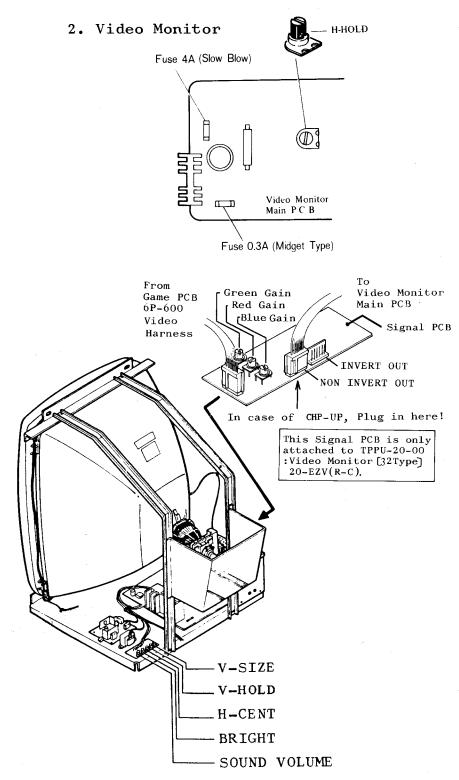

Do not touch the inside of the Video Monitor in which many parts are supplied with high voltage.

CAUTIONS

- (1) Turn the power off before exchanging and removing the PCB and connectors.
- (2) Do not touch IC, LSI and other electronic parts on PCB. Do not use a tester or the like on them.
- (3) PCB to be stored or transported should be wrapped by a conductive pouch or aluminum foil.
- (4) PCB should not be exposed direct to the sun.
- (5) When soldering, use soldering iron of which end is grounded.