

PROGGER SWITCH SETTINGS

Switches 1 and 2 - Number of frogs

<u>Switch 1</u>	<u>Switch 2</u>	<u>No. of frogs</u>
OFF	OFF	Unlimited frogs
ON	OFF	5
OFF	ON	7
ON	ON	3

Switch 3 - Mole

- OFF - Cocktail
- ON - Upright

Switch 4 - Not Used

Switch 5 - Coinage

- OFF - 10p 1 play; 50p 6 plays
- ON - 20p 1 play; 50p 3 plays

Switch 6 - Not Used