



Kurz-Kasch, Inc.

Electronics Division
Box 1246 • 2271 Arbor Blvd.
Dayton, Ohio 45439
Telephone (513) 299-0990




Operating Instructions

For Model

NOP-6502-A

Compatible with Atari

1. Remove 6502 CPU from board.
2. Plug in 6502-A (Atari) NOP into CPU socket with the Textool locking handle at the Pin 1 location.
3. Move locking handle on Textool socket to the vertical and insert 6502 CPU into socket with CPU Pin 1 at the locking handle. Move locking handle to the horizontal.
4. Ground the watchdog disable on the CPU board.
5. Connect Signature II:

CLOCK	CPU PIN 37	
START	CPU PIN 25	
STOP	CPU PIN 25	
GROUND	CPU PIN 21	
6. Turn on Power to CPU board and observe Signature II gate light is flashing. If it is not, troubleshoot for inoperative CPU.
7. If gate light flashing, read VCC Signature 0001. If correct, read address bus.

<u>CPU PIN</u>	<u>SIGNATURE</u>
9	UUUU
10	5555
11	CCCC
12	7F7F
13	5H21
14	0AFA
15	UPFH
16	52F8
17	HC89
18	2H70
19	HPP0
20	1293
22	HAP7
23	3C96
24	3827
25	755P

8. Continue with Signature tracing.