



Kurz-Kasch, Inc.

Electronics Division
 Box 1246 • 2271 Arbor Blvd.
 Dayton, Ohio 45439
 Telephone (513) 299-0990


Operating Instructions

For Model

351A/332B

GORF

MIDWAY

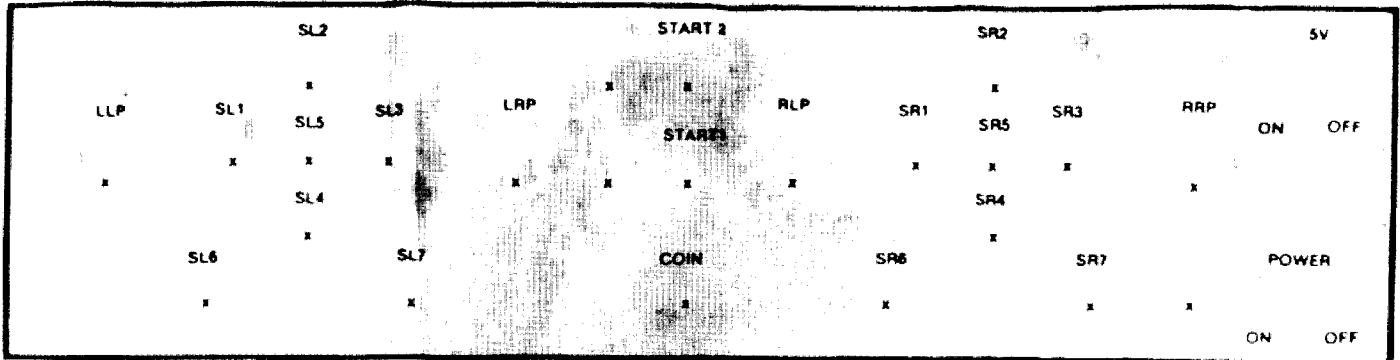

1. Insert 332B program card into "B" connector on TF-650 with number side up. Connect 9-pin connector to power supply header on cage.
2. Insert 351A program card into "A" connector on TF-650 with number side up.
3. Connect 21 and 28 pin connectors from 351A card to GORF GAME BOARD connectors J1 and J2. Connect GND CLIP to card cage.
4. Slide 5-VOLT switch to ON.
5. Slide POWER switch to ON.
6. COIN is COIN 1.
SR6 is COIN 2.
7. START 1 is 1 PLAYER.
SL7 is 2 PLAYER.
8. 1 & 2 PLAYER UPRIGHT 2nd PLAYER COCKTAIL

SL1 is LEFT	SR1 is LEFT
SL2 is UP	SR2 is UP
SL3 is RIGHT	SR3 is RIGHT
SL4 is DOWN	SR4 is DOWN
SL5 is FIRE	SR5 is FIRE
9. SL6 is TEST
10. START 2 is RESET.

SIGNATURES

<u>LOCATION</u>	<u>ROM TYPE</u>	<u>SIGNATURE</u>	<u>MARKING</u>	<u>PERSONALITY BOARD</u>
X1	9332	5928	M873A-08S0	9332
X2	9332	36P3	M873B-08S0	9332
X3	9332	838C	M873C-08S0	9332
X4	9332	0A9C	M873D-08S0	9332
X5	9332	40HA	M873E-08S0	9332
X6	9332	9629	M873F-08S0	9332
X7	9332	7A76	M873G-08S0	9332
X8	9332	5F94	M873H-08S0	9332

ALTERNATE ROM TYPE

X1	2732	PPC4	M873A-08S0	2732/M24
X2	2732	F130	M873B-08S0	2732/M24
X3	2732	4135	M873C-08S0	2732/M24
X4	2732	UUA1	M873D-08S0	2732/M24
X5	2732	5U58	M873E-08S0	2732/M24
X6	2732	HU91	M873F-08S0	2732/M24
X7	2732	A77H	M873G-08S0	2732/M24
X8	2732	8723	M873H-08S0	2732/M24